


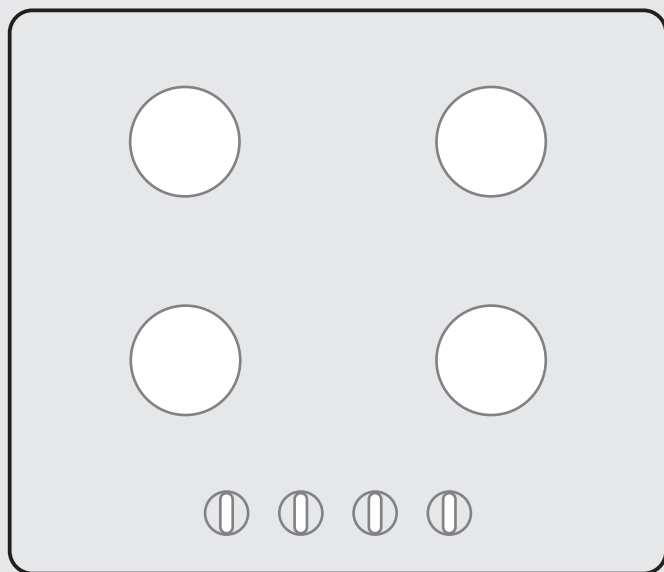

Gas Hob

USER MANUAL

30SB005_ANE24
/MCG601GBL / MCG60SS / MCG601SS
/ MCG90GBL / MCG90503BL / MCG90SS

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.
The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER	0 1
SAFETY INSTRUCTIONS	0 2
SPECIFICATIONS	0 7
PRODUCT OVERVIEW	0 8
QUICK START GUIDE	0 9
PRODUCT INSTALLATION	1 0
OPERATION INSTRUCTIONS	1 2
CLEANING AND MAINTENANCE	2 2
TROUBLESHOOTING	2 4
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	2 6
DISPOSAL AND RECYCLING	2 6

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety. Unintended use may cause hazards and loss of warranty claims.

The power cord of this product comes with a plug, no additional wiring is required.

This appliance is a Type A appliance.

The manufacturer is exempt from all liability if this manual's requirements are not complied with. All operations relating to installation, regulation and conversion to other gas types must be carried out by an authorised installation engineer, respecting all applicable regulations, standards and the specifications of the local gas and electricity providers.

You are recommended to contact the Technical Assistance Service to convert to another gas type. Before you begin, turn off the appliance's electricity and gas supply. This appliance has been designed for home use only, and may cause danger if used in other applications. The warranty will only be valid if the appliance is used for the purpose for which it was designed. Before installing, check that local distribution conditions (gas type and pressure) and the appliance's adjustment are compatible. The appliance's adjustment conditions are written on the label or the specifications plate. This appliance can only be installed in a well-ventilated place in accordance with existing regulations and ventilation specifications.

The appliance must not be connected to a combustion product removal device.

The supply cable must be attached to the unit to prevent it from touching hot parts of the oven or hob. Appliances with electrical supply must be earthed. Do not tamper with the appliance's interior. If necessary, call our Technical Assistance Service.

The units next to the appliance must be made of non-flammable materials. The laminated covering and glue for adhering it must be heat resistant.

This appliance cannot be installed above fridges, washing machines, dishwashers or similar. An oven must have forced ventilation to install a hob above it. Check the dimensions of the oven in the installation manual.

This appliance shall be installed in accordance with the regulations in force and only used in a well ventilated space. Read the instructions before installing or using this appliance.

If the country symbol does not appear on the appliance, it is necessary to refer to the instructions for installation which should provide the necessary instructions concerning modification of the appliance to the conditions of use of the country.

Explanation of Symbols



Danger

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



Warning of electrical voltage

This symbol indicates that there is a danger to life and health of persons due to voltage.



Warning

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



Caution

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



Attention

The signal word indicates important information (e.g. damage to property), but not danger.



Observe instructions

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!


DANGER

- If gas seems to leak, take the actions as follow:

Do not turn on the light.

Do not switch on/off any electrical appliance and do not touch any electric plug.

Do not use a telephone.

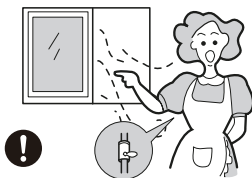

1. Stop using the product and close the middle valve.

2. Open the window to ventilate.

3. Contact our service centre by using a phone outside.

- Gas contains mercaptan, so that you can smell the gas leak (smell of rotten garlic or egg) even where only 1/1000 ppm of the gas is in the air.

WARNING

- Please take the time to read this Instruction Manual before installing or using the appliance.
- This instruction booklet must be kept with the appliance for any future reference.
- If the appliance is sold or transferred to another person, ensure the booklet is passed on to the new user.
- The manufacturer declines any liability should these safety measures not be observed.
- This appliance shall be installed in accordance with regulations in force and only used in a well ventilated space.
- Prior to installation, ensure that the gas and electrical supply complies with the type stated on the rating plate.
- This appliance cannot be installed on yachts or in caravans. Do not use this appliance as a space heater.
- The gas pipe and electrical cable must be installed in such a way that they do not touch any parts or the appliance.
- Only use the appliance for preparing food.
Do not modify this appliance. Burner panel is not designed to operate from an external timer or separate remote control system.
- Do not remove the appliance from its protective packaging until it is installed in the unit. Do not switch on the appliance if it is damaged in any way.
- This appliance is intended for use up to a maximum height of 2000 metres above sea level.
- Do not place articles on or against this appliance.
- Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 15 years old and are being supervised.
- The use of a gas cooking appliance results in the production of heat and moisture in the room in which it is installed. Ensure that the kitchen is well ventilated : keep natural ventilation holes open or install a mechanical ventilation device (mechanical extractor hood).
- Do not use this appliance if it comes in contact with water. Do not operate this appliance with wet hands.
- The heating and cooking surfaces of the appliance become hot when they are in use, take all due precautions.
- Do not use large cloths, tea towels or similar as the ends could touch the flames and catch fire.
- Never leave the appliance unattended when cooking.
- Unstable or misshapen pans should not be used on the appliance as they can cause an accident by tipping or spillage.
- Do not use or store flammable materials in any drawers near this appliance.
- Perishable food, plastic items and aerosols may be affected by heat and should not be stored above or below the appliance.
- Do not spray aerosols in the vicinity of this appliance while it is in operation.
- Ensure the control knobs are in the '●' position when not in use.
- Never use abrasive or caustic cleaning agents.
- This appliance should only be repaired or serviced by an authorised Service Engineer and only genuine approved spare parts should be used.
- This appliance is not suitable for use with aftermarket lids or covers.

CAUTION

- This appliance should be installed by a qualified technician or installer.
- The adjustment conditions for this appliance are stated on the label or data plate.
- Remove all packaging before using the appliance.
- After unpacking the appliance, make sure the product is not damaged and that the connection cord is in perfect condition. Otherwise, contact the dealer before installing the appliance.
- The adjacent furniture and all materials used in the installation must be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst in use.
- In the event of burner flames being accidentally extinguished, turn off the burner control and do not attempt to re-ignite the burner for at least one minute.
- The use of a gas cooking appliance results in the production of heat and moisture in the room in which it is installed. Ensure that the kitchen is well ventilated: keep natural ventilation holes open or install a mechanical ventilation device (mechanical extractor hood).
- Prolonged intensive use of the appliance may call for additional ventilation, for example opening of a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present.
- This appliance is designed to be operated by adults.
- Children can also injure themselves by pulling pans or pots off the appliance.
- The warranty will only be valid if the appliance is used for the purpose for which it was designed.
- CAUTION: The use of a gas cooking appliance results in the production of heat, moisture and products of combustion in the room in which it is installed. Ensure that the kitchen is well ventilated especially when the appliance is in use. Prolonged intensive use of the appliance may require additional ventilation, for example the increasing of mechanical ventilation where present, additional ventilation to safely remove the products of combustion to outside (external) air whilst also providing room air changes with additional ventilation. Consult a professional before installation of the additional ventilation.
- CAUTION: This appliance is for cooking purposes only. It shall not be used for other purposes, for example room heating.
- CAUTION: Accessible parts may be hot when the grill and/or the oven are in use. Young children shall be kept away
- CAUTION: In case the glass surface breaks:
 - shut immediately off all burners and any electrical heating element and isolate the appliance from the power supply,
 - do not touch the appliance surface,
 - do not use the appliance.
- Do not use hob guard.
- The use of inappropriate hob guards can cause accidents.

CAUTION

- This appliance is not intended for use by children or other persons whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely.
- This appliance is intended for domestic cooking only. It is not designed for commercial or industrial purposes.
- Prolonged intensive use of the appliance may call for additional ventilation, for example opening of a window, or increasing the level of mechanical ventilation where present.
- Use heat-resistant pot holders or gloves when handling hot pots and pans.
- Do not let pot holders come near open flames when lifting cookware.
- Take care not to let pot holders or gloves get damp or wet, as this causes heat to transfer through the material quicker with the risk of burning yourself.
- Only ever use the burners after placing pots and pans on them. Do not heat up any empty pots or pans.
- Never use plastic or aluminium foil dishes on the appliance.
- When using other electrical appliances, ensure the cable does not come into contact with the appliance surfaces of the cooking appliance.
- If you have any mechanical parts eg. an artificial heart in your body, consult a doctor before using the appliance.
- Do not use a tea towel or similar materials in place of a pot holder. Such cloths can catch fire on a hot burner.
- When using glass cookware, make sure it is designed for top plate cooking. If the surface cracked, switch off the appliance.
- To minimise the possibility of burns, ignition of flammable materials and spillage, turn cookware handles toward the side or center of the top plate without extending over adjacent burners.
- Always turn burner controls off before removing cookware.
- Carefully watch foods being fried at a high flame setting.
- Always heat fat slowly and watch as it heats.
- Foods for frying should be as dry as possible. Frost on frozen foods or moisture on fresh foods can cause hot fat to bubble up and over the sides of the pan.
- Never try to move a pan of hot fat, especially a deep fat fryer. Wait until the fat is completely cool.
- Before attempting to clean the appliance, it should be disconnected from the mains and cooled.
- You should not use a steam jet or any other high pressure cleaning equipment to clean the appliance.
- Do not use lids or hob guards for children which are not recommended by the hob manufacturer. They may cause accidents such as those due to the overheating, ignition or detachment of fragments of materials.
- This appliance leaves the factory set to the gas type that is indicated on the specifications plate. If this needs to be changed, please consult the assembly instructions. It is recommended you contact the Technical Assistance Service to change to another gas type.
- The images shown in these instructions are for guidance only.

SPECIFICATIONS


Description of the appliance

Model	Top Plate	Dimension (W*D*H)	Ignition device	Gas Connection	Electric supply	Burner Feature	ΣQn
30SB005_ANE24	Stainless Steel	520*300*90	Continuous Ignition Type	G1/2 thread	220-240V-50Hz-60Hz, 2W	Rapid(1), Auxiliary (1)	15.1MJ/h
MCG90503BL	Glass	900*510*90				Wok(2), Auxiliary (1)	40.3MJ/h
MCG601GBL	Glass	600*510*110				Wok(1), Semi-rapid(2), Auxiliary (1)	30.4MJ/h
MCG60SS	Stainless Steel	590*510*90					
MCG601SS	Stainless Steel	600*510*95					
MCG90GBL	Glass	900*510*99				Wok(1), Rapid(1), Semi-rapid(2), Auxiliary (1)	41.2MJ/h
MCG90SS	Stainless Steel	860*510*90					

Gas Specification


Model NO.	Gas type& pressure	Heat input and orifice size marked(mm)			
		Wok	Rapid	Semi-rapid	Auxiliary
		13.5MJ/h	10.8MJ/h	6.3MJ/h	4.3MJ/h
30SB005_ANE24	Universal LP Gas 2.75kPa	/	0.90	/	0.58
	Natural Gas 1.0kPa	/	1.50	/	0.93
MCG601GBL	Universal LP Gas 2.75kPa	1.00	/	0.68	0.58
MCG60SS	Natural Gas 1.0kPa	1.72	/	1.15	0.93
MCG601SS					
MCG90GBL	Universal LP Gas 2.75kPa	1.00	0.90	0.68	0.58
MCG90SS	Natural Gas 1.0kPa	1.72	1.50	1.15	0.93
Model NO.	Gas type& pressure	Wok	Rapid	Semi-rapid	Auxiliary
		18.0MJ/h	10.8MJ/h	6.3MJ/h	4.3MJ/h
MCG90503BL	Universal LP Gas 2.75kPa	1.15	/	/	0.58
	Natural Gas 1.0kPa	2.08	/	/	0.93

PRODUCT OVERVIEW

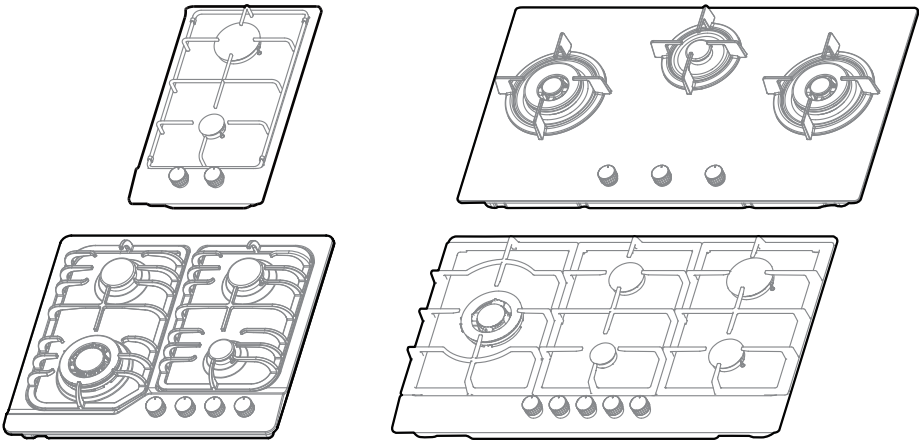

The diagram above is just for reference. Please take the appearance of the actual product as the standard.

 Accessories



Bracket
(2 for 30cm)
(4 for 60/75/90cm)



Sponge
(2 for 30cm)
(4 for 60/75/90cm)



Screw
(2 for 30cm)
(4 for 60/75/90cm)



Sealing gasket
(Quantity based on actual product)



Injector
(2 for 30cm)
(3 for MCG90503BL)
(4 for 60cm)
(5 for 75/90cm)



Auxiliary pan support 1
MCG601GBL
MCG60SS
MCG90GBL
MCG90SS



Auxiliary pan support 1
MCG90503BL



Elbow 1



Pressure joint x1
30SB005_ANE24
MCG60SS、MCG601SS、
MCG90503BL、MCG90SS、MCG90GBL



Gas Regulator Valve 1 Instruction Manual 1




QUICK START GUIDE

How to Use the appliance

The following symbols will appear on the control panel, next to each control handle:

- Black circle: Gas off
- 🔥 Large flame: maximum setting
- 🔥 Small flame: minimum setting

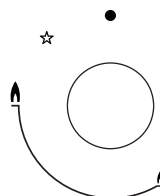


- The minimum setting is at the end of the anti-clockwise rotation of the control handle.
- All operation positions must be selected between the maximum and minimum position.
- The symbol on the control panel, next to the control handle will indicate which burner it operates.
- The appliance is fitted with a flame failure safety device on each burner, which is designed to stop the flow of gas to the burner head in the event of the flame going out.

To ignite a burner:

- Press in the control knob of the burner that you wish to light and turn it anti-clockwise to the maximum position.
- If you keep the control knob depressed, the automatic ignition for the burner will operate.
- You should hold down the control knob for 15 seconds after the flame on the burner has lit. If after 15s the burner has not lit, stop operating the device and open the compartment door and/or wait at least 1 min before attempting a further ignition of the burner.
- After this 15-second interval, to regulate the flame you should continue turning the control knob anti-clockwise until the flame is at a suitable level. The operating position MUST be at a position between the maximum and minimum position.
- To switch the burner off, turn the control knob fully clockwise to the gas off position.
- In case of power failure, the burners can be lit by carefully using a match.

PRODUCT INSTALLATION

Positioning

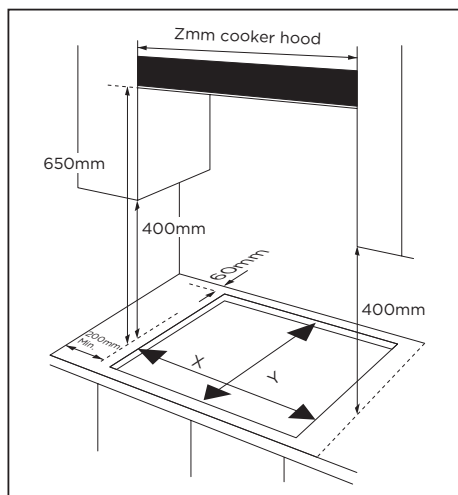


CLEARANCES REQUIRED WHEN FITTING WITH A COOKER HOOD

Model	X	Y	Z
30SB005_ANE24	262	480	300
MCG601GBL	560	480	600
MCG60SS	560	490	600
MCG601SS	560	480	600
MCG90GBL	830	480	900
MCG90503BL	830	480	900
MCG90SS	815	490	900

This appliance is to be built into a kitchen unit or 600mm worktop, providing the following minimum distances are allowed:


- The edges of the hob must be a minimum distance of 60 mm from a side or rear wall.
- 650 mm between the highest point of the hob surface (including the burners) and the underside of any horizontal surface directly above it.
- 400 mm between the hob surfaces, providing that the underside of the horizontal surface is in line with the outer edge of the hob. If the underside of the horizontal surface is lower than 400 mm, then it must be at least 50 mm away from the outer edges of the hob.
- 50 mm clearance around the appliance and between the hob surface and any combustible materials.
- You must have a gap of at least 25 mm and at most 74 mm between the underneath of the appliance and any surface that is below it.

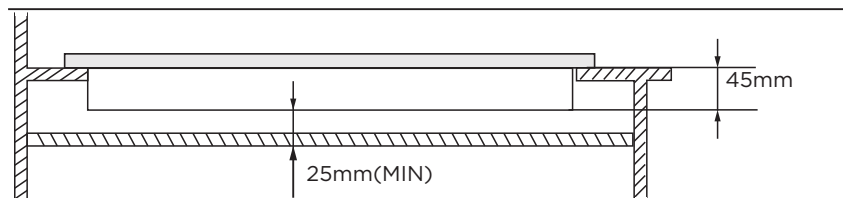

- An oven must have forced ventilation to install a hob above it.
- Check the dimensions of the oven in the installation manual.
- The cutout for the cook top must be the same size as shown in the table above.


Installing the appliance

- Remove the pan supports, the burner lid and flame spreader and carefully turn the appliance upside down and place it on a cushioned mat. Take care that the ignition devices and flame supervision devices are not damaged in this operation.
- Apply the sponge provided around the edge of the appliance.
- Do not leave a gap in the sealing agent or overlap the thickness.

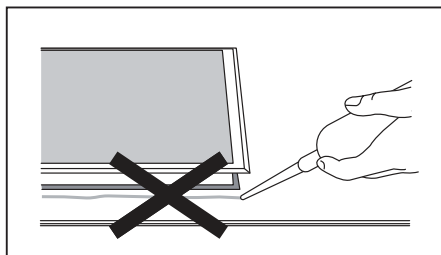

Warning

- Do not use a silicone sealant to seal the appliance against the benchtop cutout. This will make it difficult to remove the appliance from the aperture in future, particularly if it needs to be serviced.

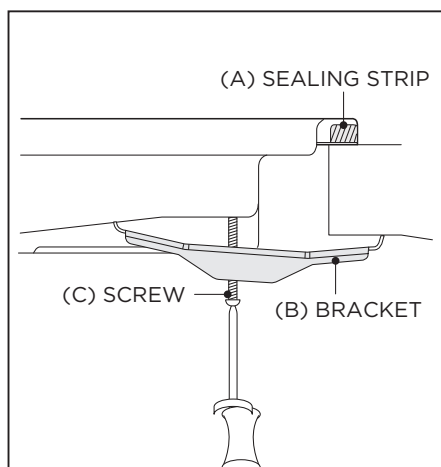

1. Place the bracket (B) over the holes that match the size of the screws. There are one set of screw holes in each corner of the hob (H). Slightly tighten a screw (C) through the bracket (B) so that the bracket is attached to the hob, but so that you can still adjust the position.
2. Carefully turn the hob back over and then gently lower it into the aperture hole that you have cut out.
3. On the underneath of the hob, adjust the brackets into a position that is suitable for your worktop. Then fully tighten the screws (C) to secure the hob into position.

OPERATION INSTRUCTIONS

Electrical Connection

- This appliance must be earthed.
- This appliance is designed to be connected to a 220-240V, 50Hz-60Hz AC electricity supply.
- The wires in the mains lead are coloured in accordance with the following code;
 - Green/yellow = Earth
 - Blue = Neutral
 - Brown = Live



Caution

- The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E or by the earth symbol.


Gas adjustment



Warning

- Take precautions on the operations and adjustments to be carried out when converting from one gas to another.
- All work must be carried out by a qualified technician.
- Before you begin, turn off the gas and electricity supply to the appliance.


1. Change the injector of the burners.

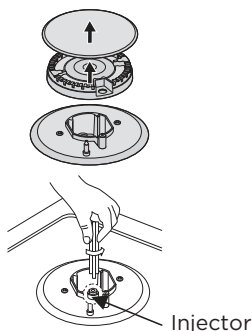

Remove the pan support, Burner lid and Flame spreader.

Unscrew the injector using a 7mm box spanner and replace it with the stipulated injector for new gas supply. Carefully reassemble the all components. After injectors are replaced, it is advisable to strongly tighten the injector in place.

2. Adjustment of minimum level of the flame.

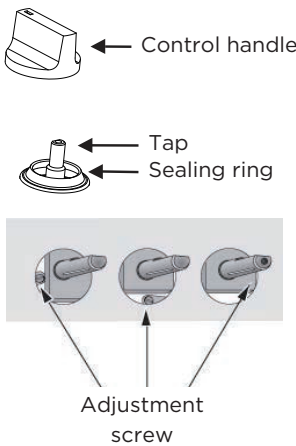 Control handle Tap Sealing ring Adjustment screw	1. Turn the taps down to minimum. 2. Remove the knob from the tap and place a small bladed screwdriver in the centre of the Adjustment screw. 3. The correct adjustment is obtained when the flame has a length of about 3-4 mm. - For butane/ propane gas, the adjusting screw must be tightly screwed in. - Refit the control knob. Make sure that the flame does not go out by quickly turning from maximum flow to minimum flow. If it does then remove the control knob and make further adjustments to the gas flow, testing it again once the adjustment has been made. 4. Repeat this process for each one of the gas taps.
---	---



Caution


- Do not dismantle the tap shaft; in the event of a malfunction, change the whole tap.
- Before placing the burners back in place, make sure that the injector is not blocked. A full operational test and a test for possible leakages must be carried out after gas
- conversion, (such as soapy water or gas detector)
After completing conversion, a qualified technician or installer has to mark "V" on the
- right gas category to match with the setting in rating plate. Remove the previous setting "V" mark.

Gas Connection




Warning

- This appliance must be installed and connected in accordance with installation regulations in force in the country in which the appliance is to be used.
- This appliance is supplied to run on LPG and natural gas. Conversion for use on LPG and natural gases must only be undertaken by a qualified person.
- It is the law that all gas appliances are installed by competent persons in accordance with the current edition of the Gas Safety Installation and Use Regulations .
- It is in your interest and that of safety to ensure compliance with the law.
- Failure to install the cooktop correctly could invalidate the warranty, result in liability claims and lead to prosecution.

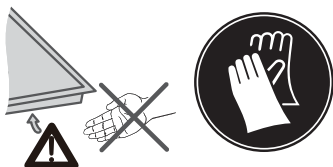

Installation of appliance

Note: Wear protective gloves to fit the hob.

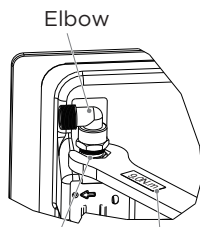

Black nut of manifold


Torque:
9±1N.m

Caution!

If necessary to adjust or install the elbow, it is allowed only torque wrench with **9±1N.m**, and work on the Black nut of manifold instead of on the elbow.

(1) Adjusting the direction of elbow

The hexagonal head of the elbow

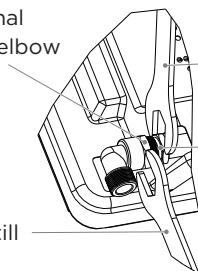

Tighten with a torque wrench of **9±1N.m**

The bolt of the gas inlet pipe assembly

Hold still

After loosening the elbow, adjust the elbow interface to the required direction as required, and keep the hexagonal head of the elbow motionless with a wrench. Use a **9±1N.m** torque wrench to tighten the bolt of the gas inlet pipe assembly. Ensure that the torque of the wrench is within the required range to prevent elbow breakage or damage caused by excessive force.

After the installation is tightened, check whether the parts are in good condition and test the air tightness to ensure the tightness of the installation. The installer is responsible for the results of the process.



- **This appliance must be installed and connected in accordance with installation regulations in force in the country in which the appliance is to be used.**
- **This appliance is supplied to run on natural gas only and cannot be used on any other type of gas without modification. Conversion for use on LPG and other gases must only be undertaken by a qualified person.**



Turn off power for safety and appliance protection. Close middle valve to prevent gas leakage.



Keep away from inflammable materials around appliance.

Before work, put on gloves.

CAUTION

After use, allow burners to cool before working on the cooktop to avoid the risk of getting burnt.

Most of the tools that you might need are shown below. Some are optional.

Item	How to use	Pictures
Screw driver	Use for assembly and disassembly of all screws	
Tubing Wrench	Use for assembly and disassembly of tubing to the burner cup	
7mm Vox Driver	Use for assembly and disassembly of injector nozzles	



Replacement of gas-type fitting

Tool: Open-end wrench

Steps for operation:

1: Disassemble with a wrench the gas-type fittings from main gas tube.

When you disassemble/assemble gas connection, use 2 spanners. One for fixing gas connection elbow, the other for tightening gas hose.

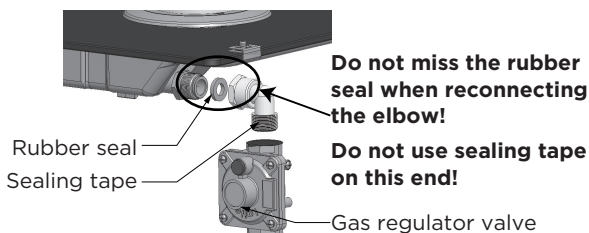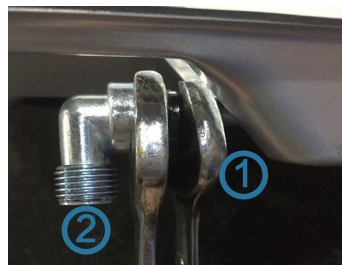

2: Lock tightly a replaceable gas-type fitting onto the main gas tube.



Statutory requirements

This installation must conform with the following:

- Manufacturer's Installation instructions
- Local Gas Fitting Regulations
- Municipal Building Codes
- Refer to AS/NZS 5601.1 for Gas Installations
- S.A.A. Wiring Code
- Local Electrical Regulations
- Any other statutory regulations

Preparing to install

Refer to AS/NZS 5601.1 for piping size details. These built-in cooktops are intended to be inserted in a benchtop cutout. Only an officially authorised technician should connect the appliance. Before you begin, turn off the gas and electricity supply.

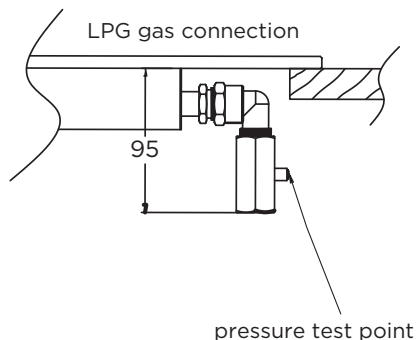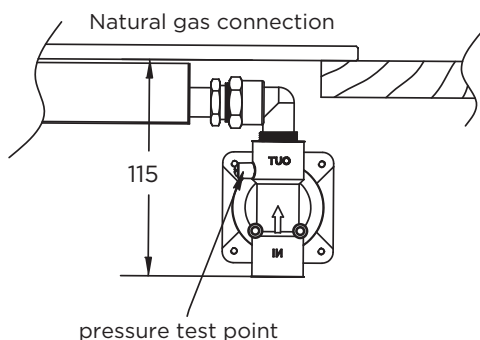

Caution

- A full operational test and a test for possible leakages must be carried out by the fitter after installation.
- Access to the whole length of the connection hose must be possible and the gas hose must be replaced before its use before the end of service life (indicated on the hose.)
- Check all connections for gas leaks with soap and water.
- DO NOT use a naked flame for detecting leaks. Ignite all burners both individually and concurrently to ensure correct operation of gas valves, burners and ignition. Turn gas taps to low flame position and observe stability of the flame for each burner individually and all together. Adhere the duplicate data plate to an accessible location near the hotplate. When satisfied with the hotplate, please instruct the user on the correct method of operation. In case the appliance fails to operate correctly after all checks have been carried out, refer to the authorised service provider in your area.

- **Flexible Hose:** If installing with a hose assembly, it must comply with AS/NZS 1869, 10mm ID, class B or D, no more than 1.2m long and installed in accordance with AS/NZS 5601.1.
- Ensure that the hose does not contact the hot surfaces of the hotplate, oven, dishwasher or any other appliance that may be installed underneath or next to the hotplate. The hose should not be subjected to abrasion, kinking or permanent deformation and should be able to be inspected along its entire length with the cooktop in the installed position. Unions compatible with the hose fittings must be used and all connections tested for gas leaks. The supply connection point shall be accessible with the appliance installed.
- **WARNING:** Ensure that the hose assembly is restrained from accidental contact with the flue outlet of an underbench oven.

Preparing to install

Refer to AS/NZS 5601.1 for piping size details. These built-in cooktops are intended to be inserted in a benchtop cutout. Only an officially authorised technician should connect the appliance. Before you begin, turn off the gas and electricity supply.

- For Natural gas: connect the natural gas appliance regulator (pictured opposite) with integral test point using approved gas thread tape or compound to the elbow fitting.
- For Universal LPG: connect the brass test point adaptor (pictured opposite) using approved gas thread tape or compound to the elbow fitting.

Ensure the supply connection point, test point and natural gas regulator adjustment screw (for Natural gas installation) are accessible for testing and/or adjustment with the hotplate in the installed position.




Natural Gas Regulator



Brass test point adaptor

Where a flexible hose assembly is used, ensure it is approved to AS/NZS 1869, Class B. Any hose assembly used must be restrained from accidental contact with the flue outlet of an under bench oven.

This hose assembly shall be suitable for connection to a fixed consumer piping outlet located as follows:
Hotplates at a point 800 mm to 850 mm above the floor and in the region outside the width of the appliance to a distance of 250 mm.

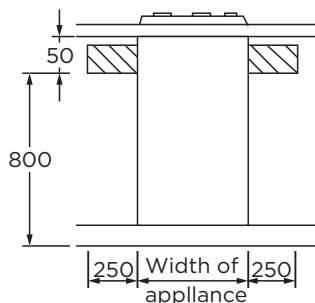

 Inlet connection region for flexible hose

After connecting to gas, check for leaks using soapy solution, never a naked flame.

Electrical Connection



Warning


- This appliance must be earthed.
- This appliance is designed to be connected to a 220-240V, 50Hz-60Hz AC electricity supply.
- The wires in the mains lead are coloured in accordance with the following code.
 - Green / yellow = Earth
 - Blue = Neutral
 - Brown = Live




- **The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E or by the earth symbol.**

Wiring Diagram


30cm

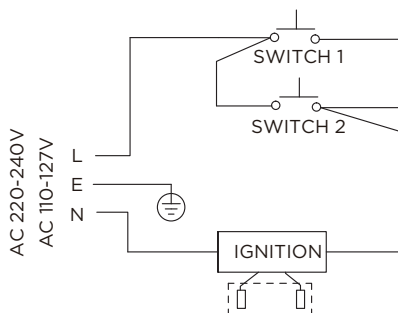


MCG90503BL

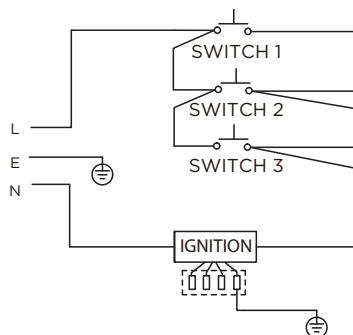

60cm

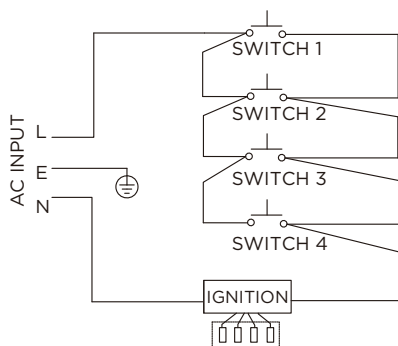

75/90cm

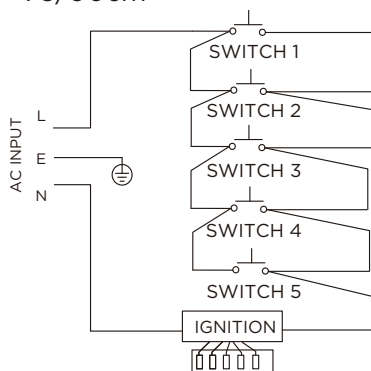

When the power cord is damaged, it must be replaced by the manufacturer, with installation carried out by a Customer Service agent or similarly qualified personnel.

Safety and Energy saving advice

Warning

- Do not use cookware that overlaps the edge of the burner.
The diameter of the bottom of the pan should correspond to that of the burner.

BURNERS	PANS	
	min.	max.
Wok	200mm	260mm
Rapid	200mm	260mm
Semi-Rapid	160mm	180mm
Auxiliary	120mm	160mm

Warning

- Do not use cast iron pans, clay or earthenware pots, grill pan, grill or toaster plates, the resulting heat build-up may damage the appliance.
- Do not touch the top plate and trivet until they have cooled down after use.
- As soon as a liquid starts boiling, turn down the flame so that it will barely keep the liquid simmering.
- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
Since the vapours that very hot oil releases can causes spontaneous combustions, please watch your food during cooking.

30SB005_ANE24: The top of the pot support is 42 mm with respect to the bench top surface
MCG60SS :The top of the pot support is 45 mm with respect to the bench top surface
MCG90503BL :The top of the pot support is 56 mm with respect to the bench top surface
MCG601SS: The top of the pot support is 48 mm with respect to the bench top surface
MCG601GBL: The top of the pot support is 43.5 mm with respect to the bench top surface
MCG90GBL: The top of the pot support is 48.5 mm with respect to the bench top surface
MCG90SS: The top of the pot support is 44 mm with respect to the bench top surface



(a) Symbol 1

Do not place anything, e.g. flame tamer or asbestos mat, between pan and pan support, as serious damage to the appliance may result.

NOTE The enclosure may be circular or square.



(b) Symbol 2

Do not remove the pan support and enclose the burner with a wok stand, as this will concentrate and deflect heat onto the hotplate.

 
 
 
 
NOTE The enclosure may be circular or square.



(c) Symbol 3

Do not use large pots or heavy weights that can bend the pan support or deflect flame onto the hotplate.

NOTE The enclosure may be circular or square.

NO		YES	
	Do not use small diameter cookware on large burners. The flame should never come up the sides of the cookware.	Always use cookware that is suitable for each burner, to avoid wasting gas and discoloring the cookware.	
	Avoid cooking without a lid or with the lid half off -as this wastes energy.	Place a lid on the cookware.	
	Do not use a pan with a convex or concave bottom.	Only use pots, saucepans and frying pans with a thick, flat bottom.	
	Do not place cookware on one side of a burner, as it could tip over.	Always place the cookware right over the burners, not to one side.	
	Do not use cookware with a large diameter on the burners near the controls, which when placed on the middle of the burner may touch the controls or be so close to them that they increase the temperature in this area and may cause damage.		
	Never place cookware directly on top of the burner.	Place the cookware on top of the trivet.	
	Do not place anything, e.g. flame tamer, asbestos mat, between pan and pan support as serious damage to the appliance may result.		
	Do not use excessive weight and do not hit the cooktop with heavy objects.	Handle cookware carefully when they are on the burner.	

Caution

- As soon as a liquid starts boiling, turn down the flame so that it will barely keep the liquid simmering.



Warning

- Do not modify this appliance.
- This appliance must be installed by an authorised technician or installer.
- Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible.
- The adjustment conditions for this appliance are stated on the label (or data plate).
- This appliance is not connected to a combustion products evacuation device. It should be installed and connected in accordance with current installation regulations. Particular attention should be given to the relevant requirements regarding ventilation.
- Before installing, turn off the gas and electricity supply to the appliance.
- All appliances containing any electrical components must be earthed.
- Ensure that the gas pipe and electrical cable are installed in such a way that they do not touch any parts of the appliance which may become hot.
- Gas pipe or connector shouldn't be bent or blocked by any other appliances.
- Check the dimensions of the appliance as well as the dimensions of the gap to be cut in the kitchen unit.
- The panels located above the work surface, directly next to the appliance, must be made of non-flammable material. Both the stratified surfacing and the glue used to secure it should be heat resistant, to prevent deterioration.
- Turn on appliance tap and light each burners. Check for a clear blue flame without yellow tipping. If burners shows any abnormalities check the following:
 - Burner lid on correctly
 - Flame spreader positioned correctly
 - Burner vertically aligned with injector nipple
- A full operational test and a test for possible leakages must be carried out by the fitter after installation.
- The flexible hose shall be fitted in such a way that it cannot come into contact with a moveable part of the housing unit and does not pass through any space susceptible of becoming congested.
- Extension sockets are forbidden.

CLEANING AND MAINTENANCE

Warning

- Cleaning operations must only be carried out when the appliance is completely cool.
- The appliance should be disconnected from your mains supply before commencing any cleaning process.
- Clean the appliance regularly, preferably after each use.
- Abrasive cleaners or sharp objects will damage the appliance surface; you should clean it using water and a little washing up liquid.

Usable	Unusable
 Soft cloth  Neutral Detergent	 Nylon Brush  Metal Brush  Edible Oil  Acidic/Alkali Detergent  Abrasive  Thinner/Benzene

Pan support, Control handles

- Take off the pan support.
- Clean these and the control handles with a damp cloth, washing up liquid and warm water. For stubborn soiling, soak beforehand.
- Dry everything with a clean soft cloth.


Top plate

- Regularly wipe over the top plate using a soft cloth well wrung-out in warm water to which a little washing up liquid has been added.
- Dry the top plate thoroughly after cleaning.
- Thoroughly remove salty foods or liquids from the hob as soon as possible to avoid the risk of corrosion.
- Stainless steel parts of the appliance may become discoloured over time. This is normal because of the high temperatures. Each time the appliance is used these parts should be cleaned with a product that is suitable for stainless steel.

Burners

- Remove the burner lids and Flame Spreaders by pulling them upwards and away from the top plate.
- Soak them in hot water and a little detergent or washing up liquid.
- After cleaning and washing them, wipe and dry them carefully. Make sure that the flame holes are clean and completely dry.
- Wipe the fixed parts of the burner cup with a damp cloth and dry afterwards.
- Gently wipe the ignition device and flame supervision device with a well wrung-out cloth and wipe dry with a clean cloth.
- Before placing the burners back on the top plate, make sure that the injector is not blocked.

Re-assemble the Auxiliary, Semi-Rapid, Rapid and Wok burners as follows:

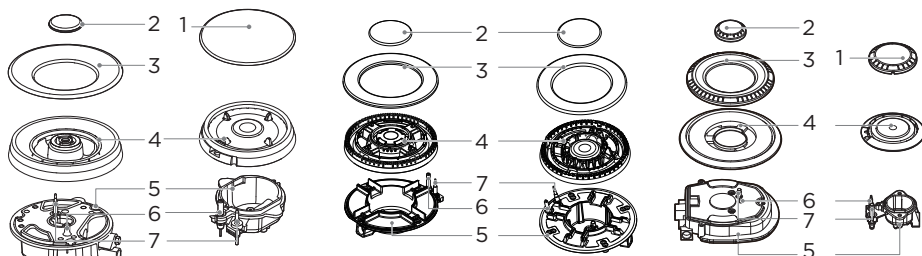

Conformation Burners

1. Place the flame spreader (4) on to the burner cup (5) so that the ignition device and the flame supervision device extend through their respective holes in the flame spreader. The flame spreader must click into place correctly.
2. Position the burner lid (1,2,3) onto the flame spreader (4) so that the retaining pins fit into their respective recesses.

Caution

- Replace parts in the correct order after cleaning.
 - Do not mix up the top and bottom.
 - The locating pins must fit exactly into the notches.

TROUBLESHOOTING

Repairs should be performed by a licensed technician only. Improper repair may result in considerable danger to you and others.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.

However, some minor problems can be resolved as follows.

Problem	Possible reason	Solution
Not ignited	• No Spark	Check the electricity supply
	• The burner lid is badly assembled	Assemble the lid correctly
	• The gas supply is closed	Open the gas supply completely
Badly ignited	• The gas supply is not completely open	Open the gas supply completely
	• The burner lid is badly assembled	Assemble the lid correctly
	• The ignition plug is contaminated with alien substance	Wipe alien substance with a dry cloth
	• The burners are wet	Dry the burners lids carefully
	• The holes in the flame spreader are clogged	Clean the flame spreader
Noise made when combusted and ignited	• The burner lid is badly assembled	Assemble the burner lid correctly
Flame goes out when in use	• The flame supervision device is contaminated with alien substance	Clean the flame supervision device
	• Product being cooked has boiled over and extinguished the flame	Turn off burner knob.Wait one minute and reignite zone
	• A strong draught may have blown the flame out	Please turn off zone and check cooking area for draught such as open windows.Wait one minute and reignite zone

Problem	Possible reason	Solution
Yellow Flame	The holes in the flame spreader are clogged	Clean the flame spreader
	Different gas is used	Check the gas used
Unstable Flame	The burner lid is badly assembled	Assemble the burner lid correctly
Gas Smell	Gas leakage	Stop using the product and close the middle valve. Open the window to ventilate. Contact our service centre by using a phone outside

 If problem is not solved, please contact customer care center.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.


This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important instructions for environment

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

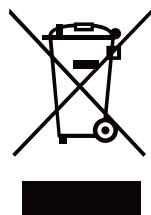

Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.





www.midea.com/au