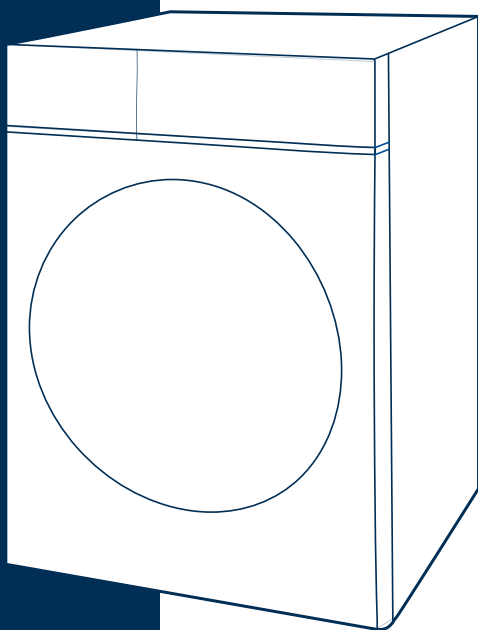


WASHING MACHINE**Front Loading****USER MANUAL****Read This Manual**

Read all instructions and explanations for the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the appliance is sold or passed on, ensure that the new owner always receives this operation instructions.

MODEL:
MF210W100BW

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	06
PRODUCT OVERVIEW	07
QUICK START GUIDE	08
PRODUCT INSTALLATION	10
OPERATION INSTRUCTIONS	14
APP SETUP AND OPERATION	26
CLEANING AND MAINTENANCE	28
TROUBLE SHOOTING	32
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	33
DISPOSAL AND RECYCLING	34
DATA PROTECTION NOTICE	35
WARRANTY CARD	36



Read all instructions and explanations before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the appliance is sold or passed on then ensure that the new owner always receives these operation instructions.

SAFETY INSTRUCTIONS

Safety Instructions

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.

- Children should be supervised that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Max. Inlet water pressure 1 MPa. Min. inlet water pressure 0.05 MPa.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments;
- Do not install the machine on a carpet floor.
- The obstruction of the openings by a carpet can damage the machine.

Model	Washing Capacity
MF210W100BW	10.0kg

For countries other than EU:

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children being supervised not to play with the appliance.

For use in EU countries:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children does not play with the appliance.
- Cleaning and user maintenance are not made by children without supervision.
- Children of less than 3 years are kept away unless continuously supervised.
- Areas for communal use in blocks of flats.

Explanation of Symbols



DANGER

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



WARNING OF ELECTRICAL VOLTAGE

This symbol indicates that there is a danger to life and health of persons due to voltage.



WARNING

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



CAUTION

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



NOTE

The signal word indicates important information (e.g. damage to property), but not danger.



OBSERVE INSTRUCTIONS

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.



WARNING: Electric Shock Hazard

- If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
- Risk of electric shock!
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

Installation Location and Surrounding

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes, let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the machine .
- Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see“Maintenance - Cleaning of drain pump filter”) to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.

Installation

- Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage may result.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Before using the machine, the product shall be calibrated.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.

Electrical Connection

- Make sure the supply cable is not trapped by the machine, or it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the “Technical specifications” table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.
- Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.



WARNING:

- Don't use multiple plugs or extension cords.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.

Water Connections

- Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak, close the water tap and get it repaired.
- Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.
- The water inlet and outlet hoses have to be safely installed and remain undamaged.
- Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.


Operation and Maintenance

- Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to this machine.
- Remove all objects from pockets such as lighters and matches before use the appliance. Thoroughly rinse items that have been washed by hand.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax and wax removers should be washed in hot with an extra amount of detergent before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be washed in the machine.
- Fabric softeners or similar products should be used as recommended in their instructions.
- Never try to open the door forcefully.
- The door will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.
- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never pour water over the appliance for cleaning purpose. Risk of electric shock!
- Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The producer will not be responsible for damages caused by the intervention of not authorized persons.

Transport


- Before Transport:
 - Bolts shall be reinstalled to the machine by a specialized person;
 - Accumulated water shall be drained out of the machine.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door can not be used as a handle.

SPECIFICATIONS

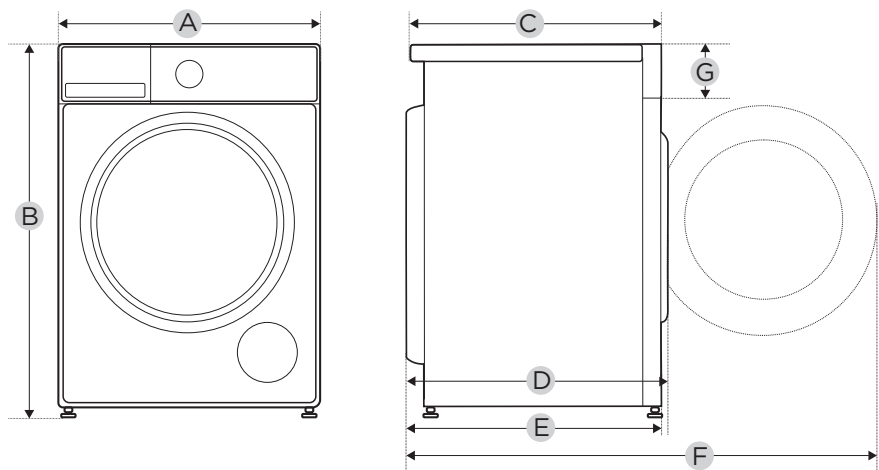

Model	MF210W100BW
Power Supply	220-240V~,50Hz
MAX. Current	10A
Standard Water Pressure	0.05MPa~1MPa
Washing Capacity	10.0kg
Dimension	
A	595mm
B	850mm
C	575mm
Weight	74kg
Rated Power	1650W
Reference Dimension	
D	620mm
E	595mm
F	1110mm
G	120mm

PRODUCT OVERVIEW

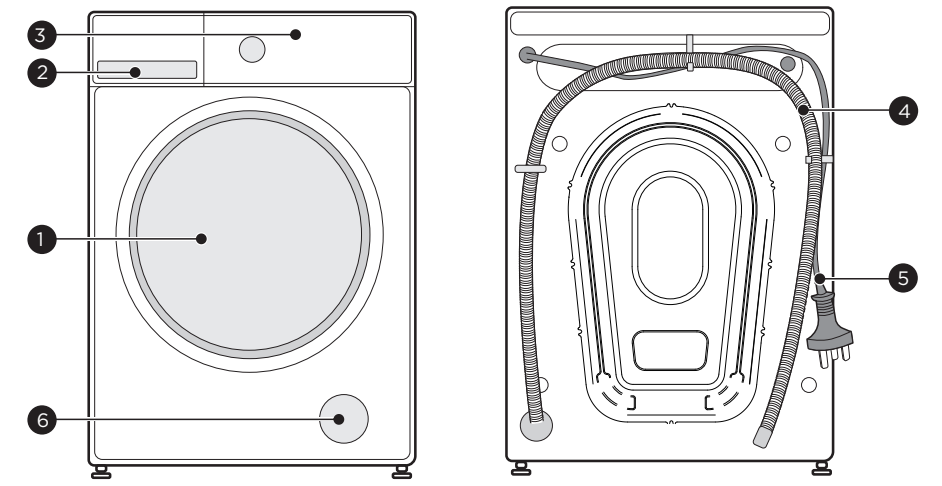

1	Door
2	Detergent dispenser
3	Control panel

4	Drain hose
5	Power supply cord
6	Service flap

 NOTE

The product picture is for illustration only, please refer to real product as reference.


Accessories

4 x Cover caps

1 x Supply hose cold water

1 x Owner's manual

Acoustic panel (optional)

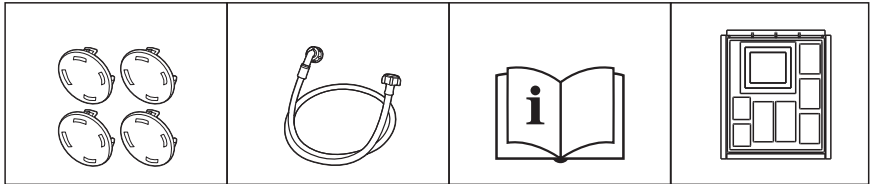


QUICK START GUIDE

CAUTION


- Before washing, please make sure the machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, recommended to clean the inner drum by running the "DRUM CLEAN" or other program with the optional temperature of 90°C. Be careful not to put laundry and detergent in the machine.

1. Before Washing


1. Plug in

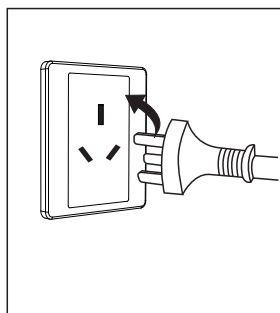


2. Open tap

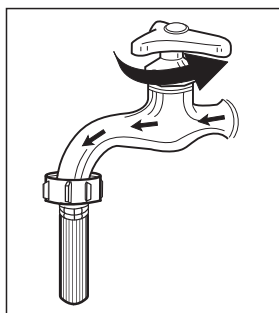


3. Load

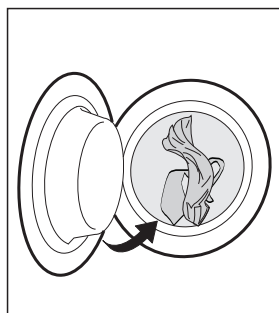

4. Close door

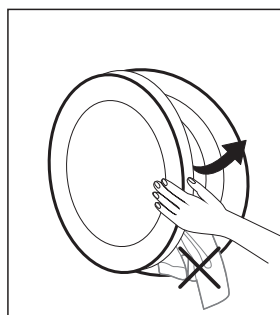

5. Add detergent

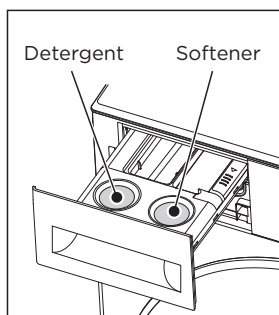


NOTE


- The detergent box of this model is an automatic-dispensing one, which can store a certain amount of laundry detergent and softener without adding it every time.
- When closing the door, please make sure that your clothes are not caught between the sealing ring and the machine door to prevent water leakage caused by pulling and damaging the sealing ring during operation.

2. Washing


1.Power on

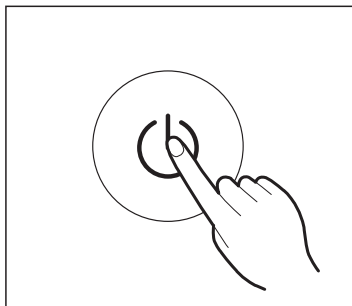


2.Select programme

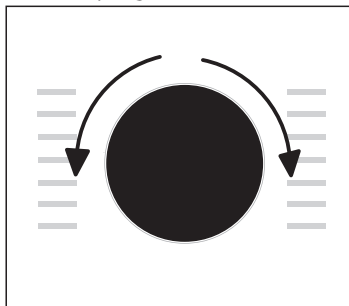

3.Select function or remain default settings

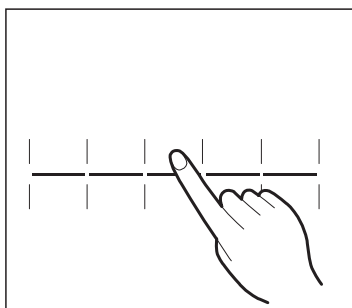

4.Press Start/Pause to start the program

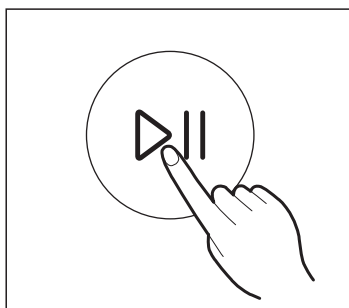

NOTE

1 : If default is selected, step 3 can be skipped.

2: The function button line chart is for reference only, please refer to real product as standard.


3. After Washing

Buzzer beep and “End” on display.

PRODUCT INSTALLATION



Tools Needed If Installation By Yourself (not include)

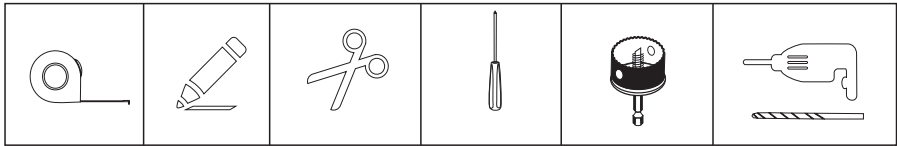


Installation Area



WARNING


- Stability is important to prevent the product from wandering!
- Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture.

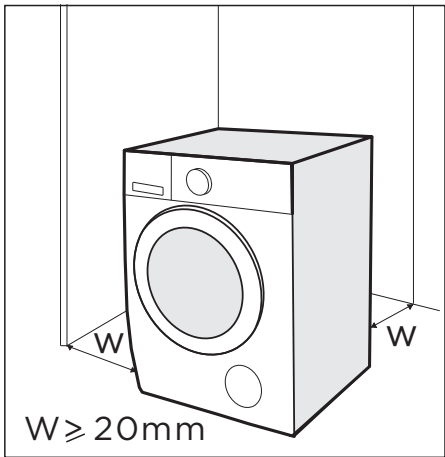

Before installing the machine, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface.
2. Avoid direct sunlight.
3. Sufficient ventilation.
4. Room temperature is above 5 °C .
5. Keep far away from the heat sources such as coal or gas burning appliances.

Unpacking the Machine

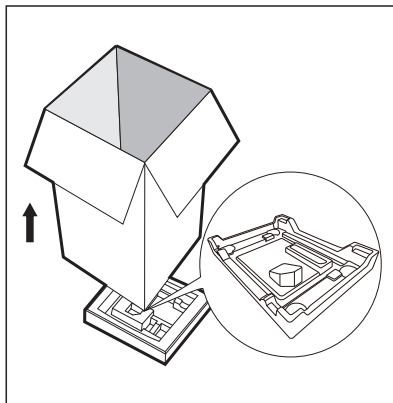

WARNING

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.


1. Remove the cardboard box and styrofoam packing.
2. Lift the machine and remove the base packaging.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

Remove Transport Bolts


WARNING

You must remove the transport bolts from the backside before using the product.


1. Loosen the 4 transport bolts with a spanner.

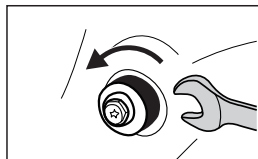

2. Remove the bolts including the rubber parts and keep them for future use.

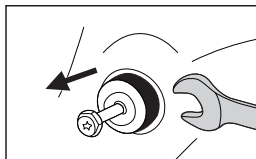


3. Close the holes using the cover caps.

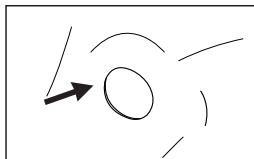

Levelling the Machine

WARNING

The lock nuts on all four feet must be screwed tightly against the housing.

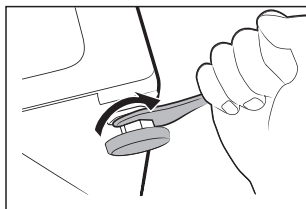


1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Adjust the legs and lock the nuts with a spanner.
Make sure the machine is level using a spirit level.

Connect the Water Supply Hose


WARNING

To prevent leakage or water damage, follow the instructions in this chapter.

- Do not kink, crush or modify water inlet hose.

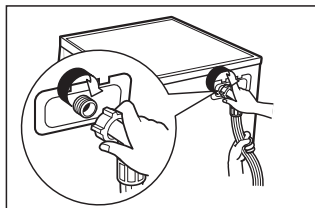

Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.

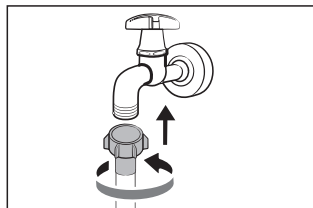

NOTE

- Connect manually, do not use tools. Check if the connections are tight.


Drain Hose

WARNING


- Do not kink or protract the drain hose.
- Position drain hose properly ,otherwise damage might result in water leakage.
- It is not allowed to remove the buckle of drain pipe.

There are two ways to place the end of drain hose:

1.Put it into the water trough.

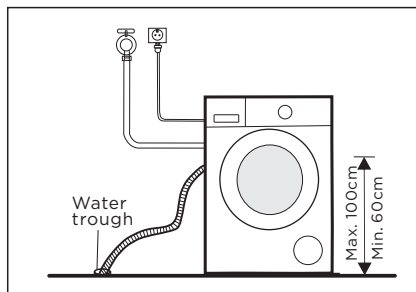


2.Connect it to the branch drain pipe of the trough.

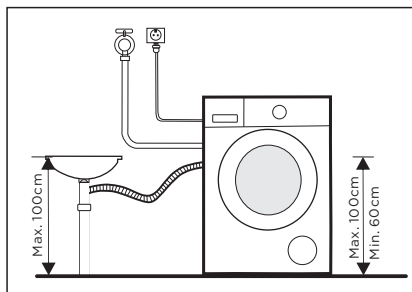

Acoustic Panel

NOTE

- Please make sure to assemble the acoustic panel, which can effectively reduce the noise caused by the machine while working, in order to provide you with a more peaceful and quiet living environment.

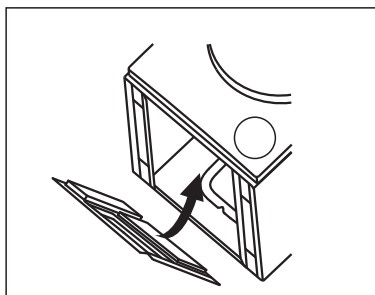


1. Get the machine laid on the floor, using some soft material like foam or clothes between the machine and floor for a protection;
2. Stick the acoustic panel to the bottom of machine.

OPERATION INSTRUCTIONS


Before Each Washing

- The ambient temperature of the machine should be 5°C-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine properly.


1. Take all items out of the pockets

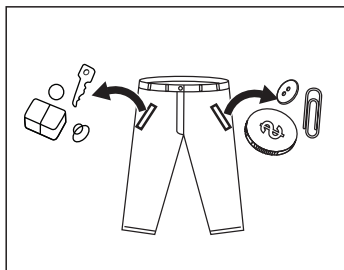


2. Sort laundry according to color and textile type

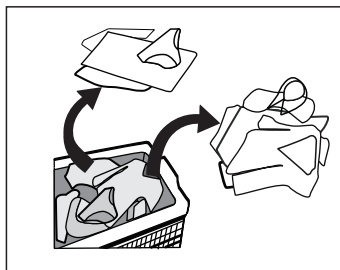

3. Tie together long textile strips and belts, close zips and button

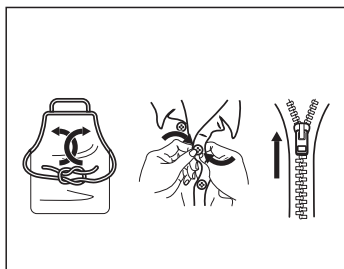

4. Put small items into a laundry bag

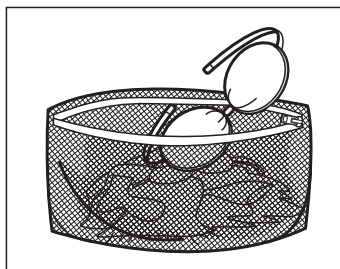

WARNING


- It is prohibited to wash clothes that adhere to any volatile or flammable substance such as cleaning agent, dry cleaning agent, spot remover, acetone, gasoline, kerosene, beauty oil, massage oil, animal oil, machinery oil, dry cleaning oil, volatile agent, alcohol, turpentine, wax, wax remover, banana water, disinfectant tablets, resin, etc.
- Washing single clothes items may easily create big eccentricity. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.
- Do not wash, spin water-proof seats, mats ,or clothing.

Detergent Dispenser

CAUTION

- The detergent box of this model is an automatic dosing one, which can store a certain amount of detergent and softener without adding it every time;
- Please put the bead-type detergent directly into the drum together with clothes. Do not put it into the detergent box to avoid blocking the dosing port. When using laundry beads, please disable automatic dosing function;
- For caked and viscous detergents or additives, it is recommended to dilute them with a small amount of water before pouring them into the detergent box;
- Please select the correct dosing port. Incorrect dosing may lead to foam residue and unclean clothes;
- Please install the detergent box before start-up. Do not open it when the machine is running to prevent water or foam from overflowing.

A	Laundry powder dosing (single dosing)
B	Laundry detergent dosing (automatic dosing)
C	Softener dosing (automatic dosing)

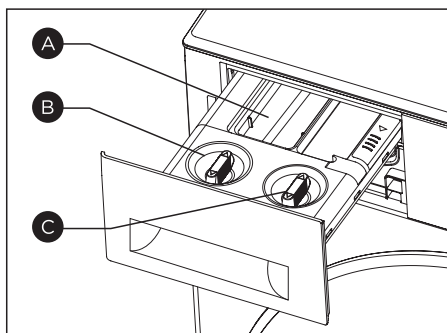

A Laundry powder dosing (single dosing)

1. This is a manual dosing port. Please put the amount of laundry powder required for this washing;
2. When putting laundry powder or other detergents into this dosing port, please disable automatic dosing function, add a proper amount of laundry powder or detergent and confirm whether it is high-foaming or concentrated. Excessive addition will cause foam overflow and water leakage, trigger the defoaming program and increase the running time;
3. When the high-temperature drum clean program is used, the automatic dosing function is disabled by default. Do not manually add detergent or laundry detergent. If a special cleaning agent is used, pay attention to the manufacturer's instructions and dosage;
4. If clothes disinfectant is needed, it can be put at this port. Please refer to the instructions and dosage of the disinfectant manufacturer for use.


B Laundry detergent dosing (automatic dosing)

1. Please choose low-foam laundry detergent, because high-foaming one is easy to cause unclean rinsing or foam overflow and water leakage ;
2. It is recommended to dilute particularly viscous laundry detergent according to the actual situation;
3. When the washing machine is powered on, it will automatically detect the remaining amount of laundry detergent. If the screen prompts flash "  ", it means that the remaining amount of laundry detergent in the automatic dosing box is insufficient. Please unscrew the cover and add laundry detergent;
4. Please screw up the cover after adding detergent.

C Softener dosing (automatic dosing)

1. The washing machine will put softener in the last rinsing stage. Please do not put detergent into this tank;
2. Softener can neutralize the residue of laundry detergent and powder to a certain extent;
3. When the washing machine is powered on, it will automatically detect the remaining softener. If the screen prompts flash "  ", it indicates that the remaining softener in the automatic dosing box is insufficient. Please unscrew the cover and add softener;
4. After adding the softener, be sure to screw on the cover.

Control Panel

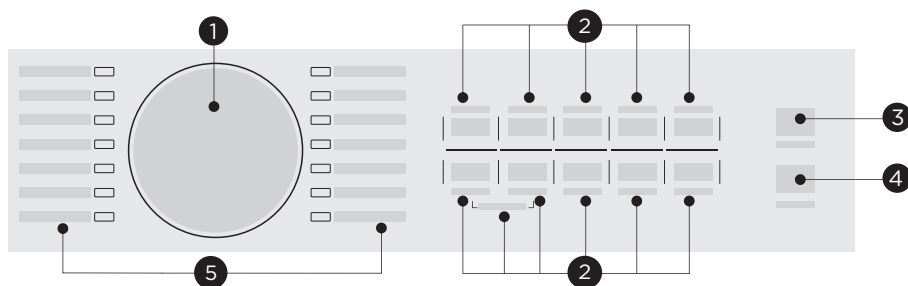

1 Display

The display shows settings, estimated remaining time, options and status messages.

2 Option

Press buttons to change program parameters or select additional functions.

3 On/Off

Power on or off machine.

4 Start/Pause

Start or pause your program.


5 Program

Choose appropriate program according to the laundry type.

NOTE

- The Chart is reference only, please refer to real product as standard.

Display

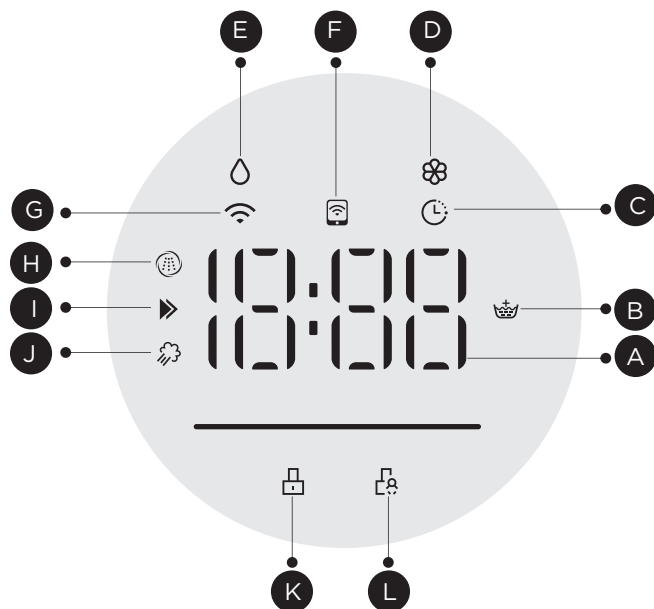

A Display

Wash Time

1:25

Speed

400

Error

E30

Delay End

2H

End

End

Temp.

30

B Rinse+

D Softener

F Remote

H Spray

J Steam

L Child Lock

C Delay End

E Detergent

G Wireless Network

I Turbo

K Door Lock

Option



Spin

When needed, the spinning speed can be adjusted pressing the Speed button in the following steps: 0-400-600-800-1000-1200-1400.

Cycle	Default spin speed (rpm)	Cycle	Default spin speed (rpm)
COTTON	1000	COTTON ECO	1000
SPORTSWEAR	800	WOOL	800
MIX	1400	STEAM REFRESH	1000
DARK	1000	QUICK 45'	800
HealthGuard	800	QUICK 15'	800
DRUM CLEAN	--	DELICATE	800
DOWNLOAD	1000	ALLERGY CARE	1000
SPIN ONLY	1000	BABY CARE	1000
DUVET	800	BRA	800
TOWEL	1000	JEANS	800

*DOWNLOAD default program is BABY CARE.

The programs (DELICATE/ALLERGY CARE/BABY CARE/BRA/JEANS) can only be selected by SmartHome App on mobile phones.



Remote

This is the switch of remote control, if you want to use your smartphone to control the appliance remotely, you need to hold [Remote] button. Considering the safe operation of appliance, the smartphone remote control should meet the following conditions:

1. The appliance should connect to the internet;
2. The door of drum should be closed.

Remark:

- If the door is open in anytime, the remote control function will be failure.
- The remote control function is turned off at the end of each cycle automatically, if you want to use remote control function again, you need turn on it again.



Wireless Network

Methods to turn on the Wireless Network function

1. Press [Signal] button for 3 seconds to turn on the Wireless Network function, it can also configure the network or reset the network.

Methods to turn off the Wireless Network function

1. Press [Remote] button for 3 seconds to turn off the Wireless Network function.
2. Or unplug the appliance.



NOTE

- The detail of connect Wireless Network, pls check “ APP SETUP AND OPERATION ”.



Temp

When needed, the washing temperature can be adjusted by pressing the temperature button in the following steps:

Cold - 20°C - 30°C - 40°C - 60°C - 90°C.



Rinse+

The laundry will undergo an extra rinse after selecting this function.



Turbo

The function can decrease the washing time.



Soil Level

The washing time will increase or decrease after you select it.



Mute the buzzer



Press the [Signal] button to mute the buzzer.

To act the buzzer function, press the button again. The setting will be kept until the next reset.



CAUTION

- After Muting the buzzer function, the sounds will not be activated any more.



Delay End

1. Select a program
2. Press the Delay End button to choose the delaying time 0-24H
3. Press [Start/Pause] to start the delay operation



Choose program

Setting time

Start

To cancel the Delay function, press the "Delay End" button before starting the program until the display shows 0 H. If the program has already started, switch the appliance off and afterwards on and select a new program.



Detergent

Touch this button continuously to adjust the laundry detergent feeding level. The panel will display "AU, OFF and L1-4 " in a circular manner.



NOTE

- Press and hold [Detergent] for 3 seconds, and the detergent will automatically switch to the next gear. After the switch is completed, Press and hold [Detergent] again to select the next gear. (Factory default H-2, H-1 represents soft water, H-2 represents Medium water, H-3 represents hard water, and H-4 represents Very Hard water).



Softener

Touch this button continuously to adjust the softener dosing level. The panel will display "AU, OFF and L1-4 " in a circular manner.



NOTE

- Press and hold [Softener] for 3 seconds, and the softener will automatically switch to the next gear. After the switch is completed, Press and hold [Softener] again to select the next gear. (Factory default S-2, S-1 represents Little, S-2 represents Medium, S-3 represents Soft, and S-4 represents Extra Soft).



Steam

Steam is the function added before main wash, which will generate warm steam to sterilization and greater washing performance.



Spray

Spray is a function which will increase the premix of detergent, that can increase the washing performance.

Cycle	Additional functions	Cycle	Additional functions
COTTON	     	COTTON ECO	    
SPORTSWEAR	    	WOOL	    
MIX	     	STEAM REFRESH	      
DARK	    	QUICK 45'	     
HealthGuard	     	QUICK 15'	     
DRUM CLEAN	 	DELICATE	    
DOWNLOAD	     	ALLERGY CARE	      
SPIN ONLY	 	BABY CARE	     
DUVET	    	BRA	     
TOWEL	     	JEANS	     

*DOWNLOAD default program is BABY CARE.

The programs (DELICATE/ALLERGY CARE/BABY CARE/BRA/JEANS) can only be selected by SmartHome App on mobile phones.



Child Lock

This function is meant to keep children from misusing the controls.



3s Child Lock

Press [Temp] and [Remote] simultaneously for 3 seconds until the buzzer beep. The child lock indicator switches on.



CAUTION

When the Child Lock is activated, the display will alternately show “CL” and the remaining time.

Pressing any other button will cause the Child Lock indicator to flash. When the program ends, “CL” and “End” will alternate on the display.

The Child Lock deactivates all functions in control panel except the Child lock button and OFF function!

After turning off the appliance, the child lock will not be automatically released.

Only the simultaneous pressing of the two buttons [Temp.] and [Remote] can deactivate the Child Lock!

Please deactivate the Child Lock before selecting a new program!



Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully.

To Press[3s for Reload]3sec. to reload, and start the clothes adding in the midway function. Please follow the steps as bellow:

1. Wait until the drum stops rotation.

2.The door lock is unlocked.

3.Close the door when the clothes are reloaded and press the [Start/Pause] button.



Press[3s for Reload]3sec.



Reload the clothes



Start



CAUTION

- Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.
-

Programmes

Programmes are available according to the laundry type.

Programmes	
COTTON	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
MIX	Mixed load consisting of textiles made of cotton and synthetics.
COTTON ECO	Hard-wearing textiles, heat-resistant textiles made of cotton or linen. Energy-saving programme.
JEANS	Specially for jeans.
TOWEL	For items such as towels, sheets, pillowcases and dish rags.
HealthGuard	Keep the high temperature for washing, effectively remove harmful bacteria.
QUICK 45'/15'	This procedure defaults to QUICK 45', press the "Turbo" to switch to QUICK 15', which is suitable for washing few and not very dirty clothes quickly. Sometimes, after the Quick 15' procedure is completed, the moisture content of clothes is high.
DUVET	This program is specially designed for washing duvet coats.
STEAM REFRESH	The Steam Wash can deeply penetrate the fiber, which effectively eliminate bacteria and germs, preventing odors and protecting health.
WOOL	Hand or machine-washable wool or richwool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).
SPIN ONLY	Spins and drains the water.
DRUM CLEAN	Specially set in this machine to clean the drum and tube. It applies 90 °C high temperature sterilization to make the clothes washing more green. When this programme is performed, the clothes or other washing cannot be added. When proper amount of chlorine bleaching agent is put in, the barrel cleaning effect will be better. The customer can use this programme regularly according to the need.
DOWNLOAD	By using App, you can download additional cycles to your machine, we have limited cycle numbers on the panel, but we have more cycles in the app, and we can choose one via the app, and the by controlling the knob, we can apply the app cycle to the machine.
SPORTSWEAR	Washing the activewear.
BABY CARE	Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.
DARK	Washing dark clothes, it can protect the colors better.
DELICATE	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics.
BRA	Specially made for washing underwear is more demanding on rinsing strength.
ALLERGY CARE	Washing machine can effectively kill some allergens and achieve anti-allergic effect by adapting high temperature for sterilization.

The programs (DELICATE/ALLERGY CARE/BABY CARE/BRA/JEANS) can only be selected by SmartHome App on mobile phones.



The wool wash cycle of this machine has been tested and approved by The Woolmark Company for the washing of wool garments labelled as "hand wash" provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine.
M2431: MF210W100BW

Washing Programmes Table

Cycle	Load(kg)	Default Temp.(°C)	Default Time (h:min)
	10.0		
COTTON	10.0	40	1:28
SPORTSWEAR	5.0	20	0:47
MIX	10.0	40	1:30
DARK	5.0	Cold	1:18
HealthGuard	5.0	60	2:39
DRUM CLEAN	--	90	1:18
DOWNLOAD	10.0	60	2:01
SPIN ONLY	10.0	--	0:12
DUVET	2.5	40	1:27
TOWEL	10.0	40	1:48
COTTON ECO	10.0	30	0:59
WOOL	2.0	Cold	1:03
STEAM REFRESH	5.0	40	1:48
QUICK 45'	2.0	20	0:45
QUICK 15'	2.0	Cold	0:15
DELICATE	3.0	30	0:50
ALLERGY CARE	5.0	60	2:28
BABY CARE	10.0	60	2:01
BRA	10.0	30	1:30
JEANS	10.0	30	1:35

*DOWNLOAD default program is BABY CARE.

The programs (DELICATE/ALLERGY CARE/BABY CARE/BRA/JEANS) can only be selected by SmartHome App on mobile phones.

Energy test program: COTTON ECO, Temp.:60°C, Speed:1400rpm, Detergent /Softener: Off;

Half load for 10.0kg machine:5.0kg.

"COTTON ECO" is the standard washing programs to which the information in the label and the fiche relates, and they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry, that the actual water temperature may differ from the declared cycle temperature.

NOTE

- The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

Testing Methods

Model:MF210W100BW

ADDITIONAL INFORMATION FOR Standard performance TESTING:(AS/NZS 2040.1:2021, AS/NZS 2040.2:2021, AS/NZS 6400:2016 AS/NZS 2040.1:2005+A1 +A2+A3:2010, AS/NZS 2040.2:2005+A1:2012)

1. Water connections: Cold water connection
2. Water supply pressure: 320 kPa
3. Energy Warm wash Program: COTTON ECO, Temp.:60°C, Speed:1400rpm, Detergent /Softener: Off; Display:6:04
4. Detergent type: Drum detergent
5. Detergent quantity: Default
6. Adding detergent:
The detergent is dissolved and added as Paragraph B7.3 of AS/NZS 2040.1
The detergent shall be dissolved in 1 L of water
7. Anti-sudsing agent: Max
8. Test load mass: 10.0kg
9. Water consumption: 85L
10. Test Voltage:220-240V~,50Hz

APP SETUP AND OPERATION

Use Your Appliance With the SmartHome App

Before you start, make sure that:

1. Your smartphone is connected to home wireless network, and you know the network password.
2. Make sure you are near the home appliance.
3. The 2.4GHz band wireless signal is enabled on your wireless router.

Follow the below steps to enter the remote control state

Download the SmartHome App

On an app market (Google Play Store, Apple App Store), search for "SmartHome*" and find the SmartHome app. Download and install it on your phone. You can also download the app by scanning the QR code below.



Register and Log In

Open the SmartHome app, and create a new account to start (you can also register through a third-party account). If you already have an existing account, use the account to log in.



Connect Your Devices to SmartHome

1. Please make sure your mobile phone is connected to a wireless network. If it is not, go to settings and enable wireless networks and bluetooth.
2. Please power on your devices.
3. Open SmartHome app on your phone.
4. If a message of "Smart devices discovered nearby" appears, click to add.
5. If no message appears, select "+" on the page and select your device in the list of nearby devices available. If your device is not listed, please add your device manually by the device category and device model.
6. Connect your device to the wireless network according to instructions on app. If the connection fails, please follow the instructions provided by the app to continue with the operation.



Start the Remote Control

Rotate the knob randomly to indicate one of the programs, and press [] continuously until the remote control icon light up in the knob display, which means it has entered the remote control state and you can start to control remotely.

Wireless Network Status Light

Slowly flashing	Waiting for connection
Quickly flashing	Connecting
Quickly flashing solid	Connected to your wireless router

NOTE

1. Make sure your devices are powered on.
- 2.Keep your mobile phone close enough to your device when you are connecting your device to the network.
- 3.Connect your mobile phone to the wireless network at home, and make sure you know the password of the wireless network.
- 4.Check if your wireless router supports 2.4 GHz band and turn it on. If you are not sure whether the router supports 2.4 GHz band, please contact the router manufacturer.
5. The device cannot connect to the wireless network that requires authentication, and it usually appears in public areas such as hotels, restaurants, etc. Please connect to a wireless network that does not require authentication.
6. Turn off the WLAN+ (Android) or WLAN Assistant (iOS) function of your mobile phone when connecting your device to the network.
7. In the case that your device connected to a wireless network before but it needs to reconnect, please click "+" on the app Home page, and add your device again by the device category and model according to the instructions on app.

CLEANING AND MAINTENANCE


Cleaning and Care

WARNING

- Always unplug the appliance and close the water tap before cleaning and maintenance.

Cleaning the Cabinet

Proper maintenance on the machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a towel to wipe it off immediately. Never use sharp items to clean the appliance.

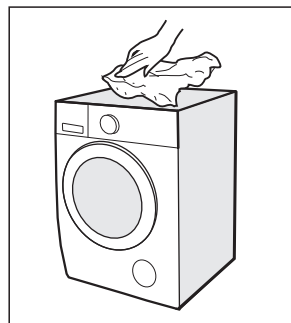

CAUTION

- Never use abrasive or caustic agents. Such as formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

Cleaning the Drum


Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!

NOTE

- Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages. Remove any coins, buttons and other objects from the seal after each wash. Clean the door seal and glass every month to ensure the normal operation of the appliance.

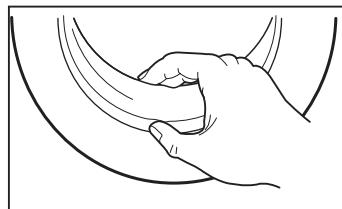


Cleaning the Inlet Filter


NOTE

- Diminishing water flow is a sign that the filter needs to be cleaned.


1. Close the tap and remove the water supply hose from it.

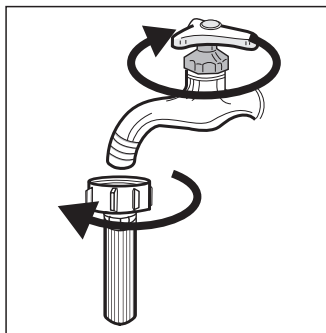


2. Clean the filter with a brush.

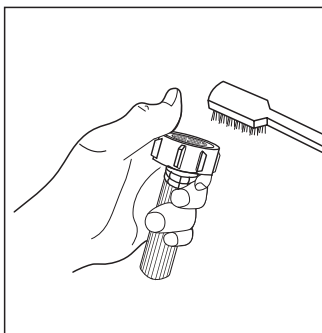

3. Unscrew the water supply hose from the backside of the machine.
Pull out the filter with long nose pliers.

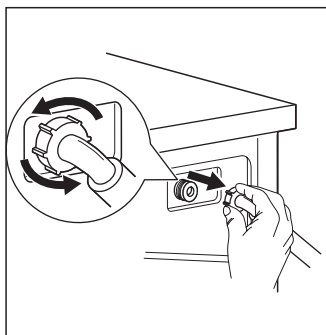


4. Use a brush to clean the filter.

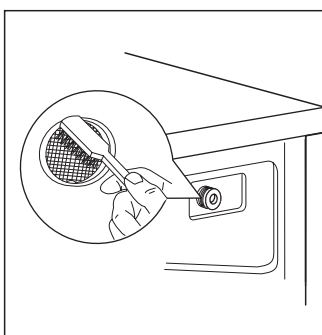


5. Reinstall the filter to the water inlet and reconnect the water supply hose.
6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.

Cleaning the Detergent Dispenser


1. Press the arrow of the detergent box and pull it out.

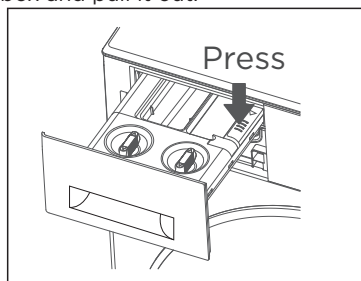


2. Wash all grooves with water.

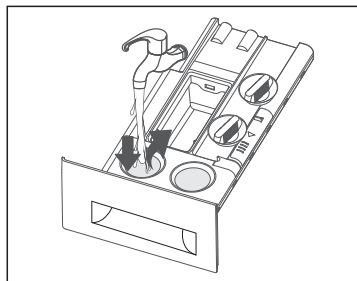


3. Clean the inner chamber of detergent box.

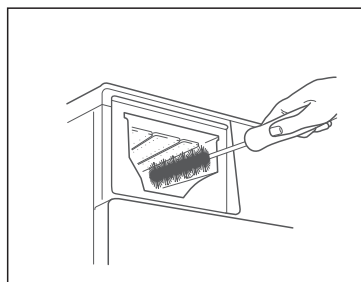

4. Clean the water stains or accumulation of detergent residues at the front sealing door under the detergent box to prevent appearance corrosion

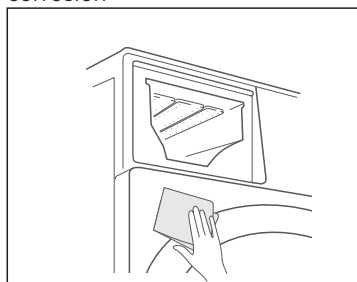

5. After cleaning, install the detergent box back.

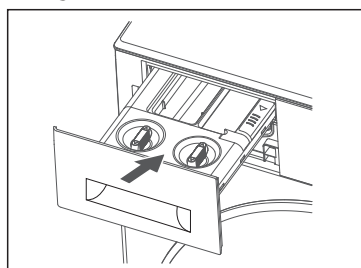


NOTE

- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.


Cleaning the Drain Pump Filter

WARNING


- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Wait for water cooling down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

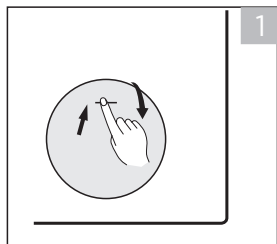


Open the lower cover cap

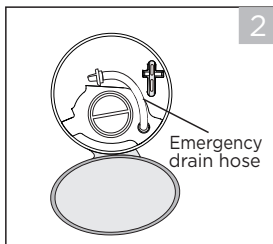


Pull out the emergency drain hose, and take off the hose cap

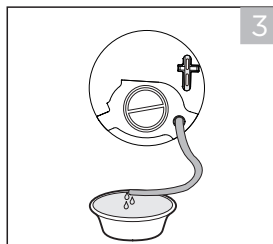


After water runs out, reset the drain hose

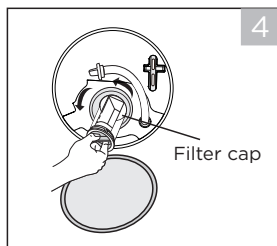

Open the filter by turning to the counter clockwise

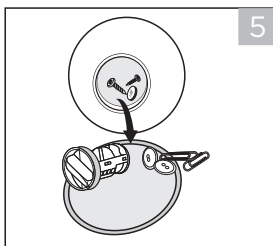

Remove extraneous matter

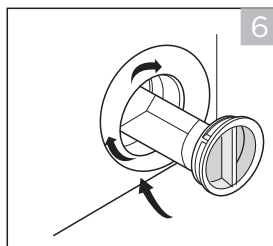

Carefully reinsert the filter and screw the lower cover cap in clockwise

CAUTION

- Make sure that valve cap and emergency drain hose are reinstalled properly, cap plates should be inserted aligning to hole plates otherwise water may leak.
- Some machines don't have emergency drain hose, so step 2 and step 3 can be skipped. Rotate lower cover cap directly to make water run into basin.
- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.

TROUBLE SHOOTING

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

Description	Possible Cause	Solution
Appliance does not start	Door is not closed properly.Clothes are stuck.	Close the door properly and restart. Check the laundry.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts are still in place. Floor is not solid or level.	Check if the fixing bolts have been removed. Make sure the appliance is installed on a solid and level floor.

Error Codes

Description	Possible Cause	Solution
E30	Door is not closed properly.	Close the door properly and restart.
E10	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
E21	Overtime water draining	Check the drain hose for blockage.
E12	Water overflow	Restart the appliance.
EXX	Others	Restart the appliance. If problem persists, please contact the customer service.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all good will derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

 
All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important Instructions for Environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

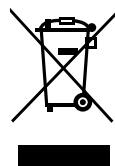

Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.

WARRANTY CARD

NOTES

We provide a guarantee for this machine in accordance with the following conditions: You have a manufacturer's warranty of _____ years from the date of purchase (proof of purchase must be provided). Our General Terms and Conditions apply.

Your device / serial number

Purchase date:

Place of purchase:

Do you have any questions ?

We are happy to support you !

<http://www.midea.com>

Customer Service

Spare parts for your appliance are available for a minimum of 10 years following EU COMMISSION REGULATION 2019/2023 ANNEX II Ecodesign requirements.

In case of questions, please contact our local customer service center.

WARNING

Risk of electric shock

- Never try to repair an appliance which is defective or presumed to be defective. You may put your own and future users' lives in danger. Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recognized!

Transport

IMPORTANT STEPS WHEN MOVING THE APPLIANCE

- Unplug the appliance and close the water inlet tap.
- Check if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Cleaning the Drain Pump Filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door can not be used as a handle.



Statement of compliance for Security Standards for Smart Devices AU

We

Wuxi Little Swan Electric Co.,Ltd. , hereby declare for below product that we meet mandatory below requirements and standards.

Brand:

Product Name: DRUM WASHING MACHINE

Product Model/type: MF210W100BW

Batch/serial no: See the serial no.in the machine

Support period with end date Period: 3 years; End date: **November 17, 2028**

The product meets the following requirements of Cyber Security (Security Standards for Smart Devices) Rules 2025:

Clause	Requirements/Standards
Passwords	Cluase 5.1-1&5.1-2 of ETSI EN 303645 v2.1.1(2020-06)
Reports of security issues	Cluase 5.2-1 of ETSI EN 303645 v2.1.1(2020-06)
Defined support periods and security updates	Cluase 5.3-13 of ETSI EN 303645 v2.1.1(2020-06)

To which this Statement of compliance is presented, meeting the relevant requirements of Cyber Security (Security Standards for Smart Devices) Rules 2025 for manufacturers based on product self-assessment.

Signed for and on behalf of: Wuxi Little Swan Electric Co.,Ltd.

Address: No. 18, Changjiang South Road 214028 Wuxi, Jiangsu PEOPLE'S REPUBLIC OF CHINA

Authorized Representatives in AU (if any):

Name: Libing Fan

Signature: *Fan Libing*

Function: Certification engineer

Date of issue: **November 17, 2025**

Place of issue: Wuxi, Jiangsu PEOPLE'S REPUBLIC OF CHINA



make yourself at home