 


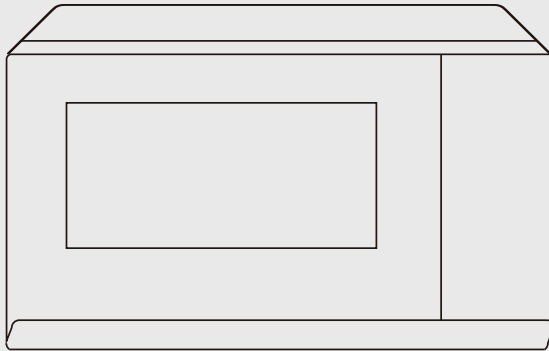

MICROWAVE OVEN

USER MANUAL

MMW8T20B

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.
The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER ----- 02

SAFETY INSTRUCTIONS ----- 03

SPECIFICATION ----- 12

PRODUCT OVERVIEW ----- 13

PRODUCT INSTALLATION ----- 15

OPERATION ----- 17

TROUBLE SHOOTING ----- 27

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT ----- 28

DISPOSAL AND RECYCLING ----- 29

DATA PROTECTION NOTICE ----- 30

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols

	Danger This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	Warning of electrical voltage This symbol indicates that there is a danger to life and health of persons due to voltage.
	Warning The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	Caution The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	Attention The signal word indicates important information (e.g. damage to property), but not danger.
	Observe instructions This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

▲ WARNING

- Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- Only use utensils that are suitable for use in microwave ovens.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)
- Only use the temperature probe recommended for this oven. (For ovens provided with a facility to use a temperature-sensing probe.)
- The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
- The microwave oven must be operated with the decorative door open. (For ovens with a decorative door.)

- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Metallic containers for food and beverages are not allowed during microwave cooking.
- The appliance shall not be cleaned with a steam cleaner.
- The appliance is intended to be used freestanding.
- The rear surface of appliances shall be placed against a wall.

**READ CAREFULLY AND KEEP
FOR FUTURE REFERENCE
HOUSEHOLD USE ONLY
(NOT FOR COMMERCIAL USE)**

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

DANGER

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard:

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

2. If a long cord set or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding-type 3-wire cord.
 - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard:

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

- Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
- Cook on maximum power for 1 minute.
- Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

SPECIFICATION


Model	MMW8T20B
Rated Voltage/Frequency	230-240 V~ 50 Hz
Microwave Input	1200-1270 W
Microwave Output	750-800 W

PRODUCT OVERVIEW

Names of Oven Parts and Accessories

In case of any differences between the appliance and the pictures in this manual, the product shall prevail.

 Remove the oven and all materials from the carton and oven cavity.
Your oven comes with the following accessories:

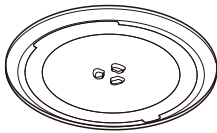

Glass Tray



 
Turntable Ring Assembly



Instruction Manual



Turntable Shaft

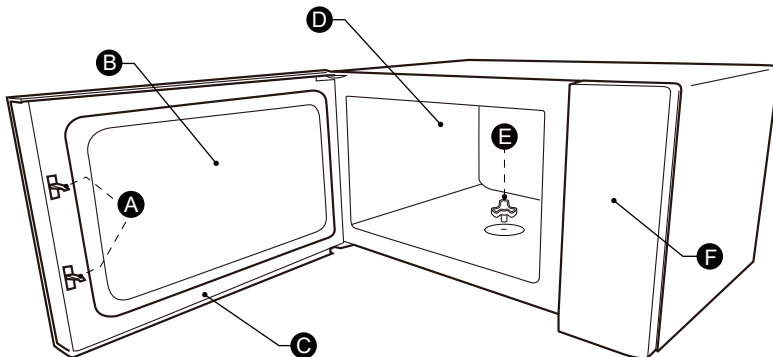


- A) Safety interlock system
- B) Observation window
- C) Door assembly

- D) Oven cavity
- E) Turntable shaft
- F) Control panel

PRODUCT OVERVIEW


TURNTABLE INSTALLATION

 Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

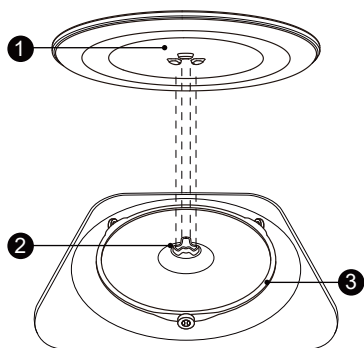

How to put the turntable in place:

 1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assembly ③. Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the centre of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

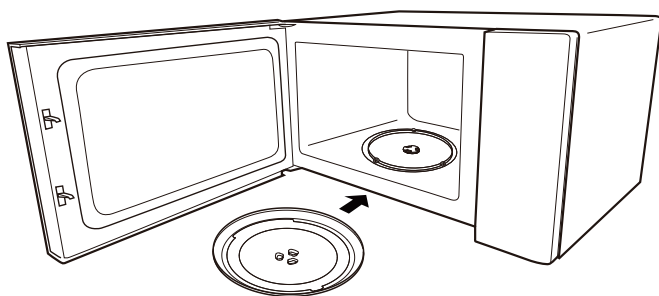

Notes:

1. Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
2. Never place the glass tray upside down. The glass tray should never be restricted.
3. Both glass tray and turntable ring assembly must always be used during cooking.
4. All food and containers of food are always placed on the glass tray for cooking.
5. Never restrict the movement of the turntable.
6. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

PRODUCT INSTALLATION

 
Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - The minimum installation height is 85cm.
 - The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
 - Do not remove the legs from the bottom of the oven.
 - Blocking the intake and/or outlet openings can damage the oven.
 - Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

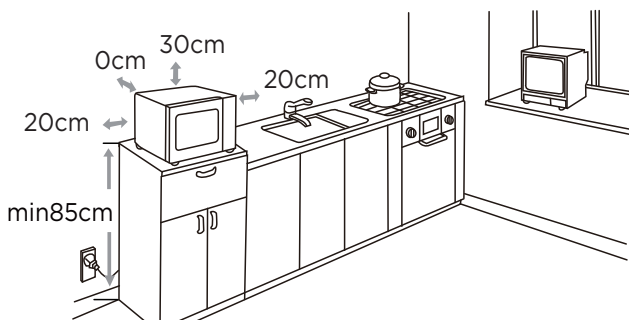

2. Plug your oven into a standard household outlet.
Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

⚠ WARNING

 
Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.



The accessible surface may be hot during operation.

OPERATION

Control Panel

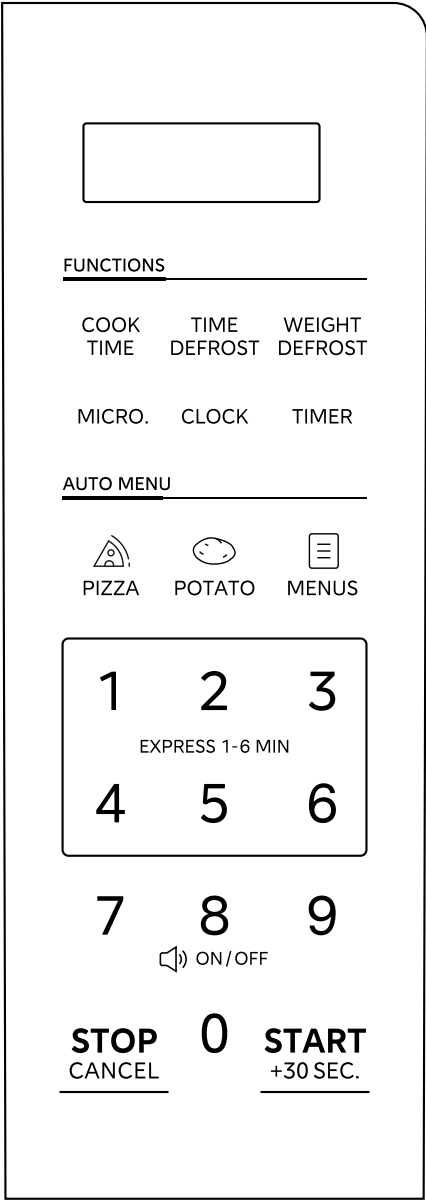

BUTTON FUNCTION OVERVIEW

Button	Description
COOK TIME	Enter the microwave cooking time setting
TIME DEFROST	Quickly defrost frozen foods based on the selected time
WEIGHT DEFROST	Quickly defrost frozen foods based on the selected weight of the food
MICRO.	Set power level for microwave operation
CLOCK	Set time of day
TIMER	Countdown timer
 PIZZA	Pizza with preset programs by weight
 POTATO	Potato with preset programs by weight
 MENUS	Auto menu with preset programs by weight
1 2 3 EXPRESS 1-6 MIN 4 5 6 7 8 9 ON/OFF 0	Use the number keys to enter customized values / Press the numbers “1-6” to start speedy cooking for 1 to 6 minutes / Use the number “8” to enter the mute function setting
STOP CANCEL	Pause active cooking status / Cancel current operation / Lock function for children
START +30 SEC.	Start speedy cooking for 30 seconds / Start operation / Add 30 seconds / Confirm input

OPERATION

1. Setting the Clock

(1) Press “ CLOCK ” once and then “00:00” will display.

(2) Press the number keys to enter the current time.

For example, time is 12:10 now, please press “1, 2, 1, 0” in turn.

(3) Press “ CLOCK ” to confirm. The clock is set.

Notes

(1) In the process of clock setting, if “ **STOP**
CANCEL ” is pressed or if there is no operation within 1 minute, the setting is invalid.

(2) To reset the clock, please repeat step 1 to step 3.

(3) The clock is a 12-hour display. If the clock is not set, it will not work when powered.

2. Setting the Kitchen Timer

(1) Press “ TIMER ” once and then “00:00” will display.

(2) Press the number keys to set the desired time. The maximum time value is “99:99”.

(3) Press “ **START**
+30 SEC. ” to confirm. The timer starts counting down.

Note

The kitchen timer is a timer.

OPERATION

3. Microwave Cooking

The 10 power levels are available.

Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PLO

- (1) Press “ **COOK TIME** ” once, the screen will display “00:00”.
- (2) Press the number keys to set the cooking time. The maximum time value is “99:99”.
- (3) Press “ **MICRO.** ” once, and “PL10” will display.
- (4) Press the number keys to set the power level. The 10 power levels are available.
- (5) Press “ **START** +30 SEC. ” to start cooking.

● Notes

- (1) In the process of setting, if the “ **STOP CANCEL** ” is pressed or if there is no operation within 1 minute, the setting is invalid.
- (2) If “PLO” is selected, the oven will work with a fan for no power. You can use this level to remove the odor of the oven.
- (3) The power level can be changed during operation. Press “ **MICRO.** ” once and then the current power will display for 3 seconds. Press the number keys to change the power. The oven will work with the selected power.

OPERATION

4. Speedy Cooking

- (1) In standby mode, pressing the number keys 1 to 6 lets you quickly select a cooking time from 1 to 6 minutes. Then you can press “ **START** +30 SEC. ” to increase the cooking time. The maximum time value is “99:99”.
- (2) In standby mode, press “ **START** +30 SEC. ” once to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is “99:99”.

Note

In the microwave and defrosting by time cooking state, each more press on “ **START** +30 SEC. ” can increase the cooking time by 30 seconds (except for the defrosting by weight and auto menu).

5. Defrost by Weight

- (1) Press “ **WEIGHT** DEFROST ” once, “dEF1” will display.
- (2) Press “ **START** +30 SEC. ” to confirm. The screen will display “500g”.
- (3) Press “ **START** +30 SEC. ” again to start defrosting.

Notes

- (1) The default weight is 500g and it cannot be changed.
- (2) The buzzer will sound to remind you to turn the food over during defrosting.
- If no operation, the oven will continue working.

OPERATION

6. Defrost by Time

- (1) Press “ **TIME DEFROST** ” once and then the screen will display “dEF2”.
- (2) Press the number keys to set the desired defrosting time. The maximum time value is “99:99”.
- (3) Press “ **MICRO.** ” once, “PL3” will display. And then press the number keys to set the power level. (If you do not need to adjust the power level, skip this step.)
- (4) Press “ **START**
+30 SEC. ” to start defrosting.

● Notes

- (1) The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.
- (2) The defrosting power cannot be changed during defrosting.

7. Lock Function for Children

You can use this function to disable the screen buttons and prevent your children from accidentally turning the oven on.

To activate the lock:

In standby mode, press and hold “ **STOP**
CANCEL ” for three seconds. A beep sounds and “ **LOCK** ” will display.

To deactivate the lock:

In the locked state, press and hold “ **STOP**
CANCEL ” for three seconds. A beep sounds.

OPERATION

8. Multi-Stage Cooking

Example: Defrost food for 500g and then cook with 50% microwave power for

7 minutes.

- (1) Press “ **WEIGHT**
DEFROST ” once and then the screen will display “dEF1”.
- (2) Press “ **START**
+30 SEC. ” to set the weight of the food to 500g.
- (3) Press “ **COOK**
TIME ” once, the screen will display “00:00”.
- (4) Press “7”, “0”, and “0” to set the cooking time to 7 minutes.
- (5) Press “ MICRO. ” once and then “PL10” will display.
- (6) Press “5” to set the power level to PL5.
- (7) Press “ **START**
+30 SEC. ” to start cooking.

● Notes

- (1) Two cooking stages can be set in multi-stage cooking.
- (2) If you set the defrost function, it will work automatically in the first stage.
- (3) The auto menu cannot be set as one of the multi-stage.

9. Mute mode

To activate the mute mode:

In standby mode, press and hold “ **8**
ON/OFF ” for 3 seconds. The buzzer will sound.

When you press the key, it does not make a sound.

To deactivate the mute mode:

In mute mode, press and hold “ **8**
ON/OFF ” for 3 seconds. The buzzer will sound.

OPERATION

10. Pizza

- (1) Press “  ” once and then “1” displays.
- (2) Press “  ” repeatedly to select “2”, “4”, or “1”.
- (3) Press “ **START** ” to start cooking.

Pizza Chart

Menu	Weight	Display	Power Level
 PIZZA	1 (50g)	1	PL10
	2 (100g)	2	
	4 (200g)	4	

11. Potato

- (1) Press “  ” once and then “1” displays.
- (2) Press “  ” repeatedly to select “2”, “3”, or “1”.
- (3) Press “ **START** ” to start cooking.

Potato Chart

Menu	Weight	Display	Power Level
 POTATO	1 (230g)	1	PL10
	2 (460g)	2	
	3 (690g)	3	

OPERATION

12. Auto Menu

- (1) Press “” once and then “A-01” displays.
MENUS
- (2) Press “” repeatedly to choose the menu you need. The 5 auto
MENUS
menus are available.
- (3) Press “**START**
+30 SEC.” to confirm.
- (4) Press “” repeatedly to set the weight of the food.
MENUS
- (5) Press “**START**
+30 SEC.” to start cooking.

Auto Menu Chart

Menu	Weight	Display	Power Level
A-01 Rice	0.5 cup (100g)	0.5	PL10
	1 cup (200g)	1	
	2 cups (400g)	2	
	4 cups (800g)	4	
A-02 Pasta	0.5 cup (100g)	0.5	
	1 cup (200g)	1	
	2 cups (400g)	2	
	4 cups (800g)	4	
A-03 Frozen Vegetable	150g	150	
	350g	350	
	500g	500	

OPERATION

Auto Menu Chart

Menu	Weight	Display	Power Level
A-04 Beverage	1 cup (120ml)	1	PL10
	2 cups (240ml)	2	
	3 cups (360ml)	3	
A-05 Dinner Plate	250g	250	
	350g	350	
	500g	500	

 Note

For the menus “A-01” and “A-02”, the buzzer will sound to remind you to turn the food over during cooking. If no operation, the oven will continue working.

13. Inquiring Function

- (1) If the clock has been set, the current time will display for three seconds by pressing “ **CLOCK** ” once in the cooking state.
- (2) In the microwave cooking state, press “ **MICRO.**” to inquire about the power level. It will display for three seconds.

TROUBLE SHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
	(1) Power cord is not plugged in tightly.	Unplug. Then plug again after 10 seconds.
Oven cannot be started.	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door is not closed well.	Close door well.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

 


Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

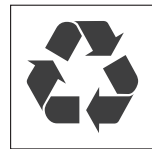

DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.



make yourself at home



www.midea.com

© Midea 2025 all rights reserved